mymesh by Chess Installation instruction

Remote Switch

Mymesh Building Light Control

The Mymesh Remote Switch three button is part of the Mymesh Building Light Control product suite for wireless lighting control. The Remote Switch is a wireless light/dimming/scene switch with a lifetime battery for flexible wall mounting. The Remote Switch enables you to switch on/off the light, step-less dim the light or select a scene for lighting fixtures equipped with Mymesh light control.

Safety \land

- Installation should be performed only by qualified personnel.
- Do not use the Remote switch if it is damaged.
- This product contains a non-replaceable and non-rechargeable Lithium battery.
- The Remote-switch has protection class IP54 and is suitable for use at indoor and covered outdoor locations.

Application

Refer to the Remote switch product sheet (see chess-wise.eu/downloads) for the product specifications and environmental conditions.



Installation

- Attach the mounting plate with at least 2 screws or double-sided adhesive tape to a wall or ceiling. Avoid positions vulnerable for mechanical impact (e.g. by transport carts).
- Insert the Remote switch at one side in the mounting plate and push the switch until it locks.

Configuration

Use the iPad Mymesh commission app for configuration of the Remote switch. First enable commission mode by operating both the left and right switch until 3 beeps are given. After pushing of one of the buttons or 30 sec the Remote switch will go to normal mode again.

Operate left and right button for	Beep	Function
3 sec	2x	Normal mode
6 sec	3x	Commission mode (after 30 sec back to normal mode)

Usage

For operational use in the Mymesh network the Remote switch must be in normal mode.

Compliance

This product complies with the European directives and relevant standards for low voltage, EMC, RED, REACH and ROHS. The Remote switch three button contains a radio. The applied radio frequency is within the ISM band 2400 – 2483.5 MHz (default 2403 MHz) and the maximum transmit power is +4 dBm. Hereby, Chess Wise declares that the radio equipment type Remote switch three button is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at chess-wise.eu/downloads.

Repair

Do not open this product. In case of failure the Remote Switch must be replaced.

X

Recycling

Do not dispose this product as household waste, but bring it to an appropriate collection point for recycling.