



MAIN MANUAL

RADICAL T8 SOFTWARE

TABLE OF CONTENTS

Safety.....	4-5
Switching on/off	
Automatic on/off	5
Home Screen	6
Home Screen Navigation	7-9
Apps and widgets	10
Apps	10-12
Widgets	13
Tuner app	14
Abbreviations	15
Media / Music	16-17
CD Media	18
Video	19
Bluetooth	20
Pairing a Bluetooth Device	20
Device Manager Functions	21
Phone Book Functions	22
Bluetooth Music (A2DP) Functions	23
Call History Functions	24
Number Pad Functions	25
Bluetooth Settings	26
Easy Connect	27
Selection Screen	27
Android USB Connection (initial connection)	28
Android / iPhone WiFi	29
Equalizer/ Zone	30
Equalizer Functions	30
Zone Functions	31
APK Installer	32-33

Steering Wheel Buttons	34-35
Settings	36
WiFi Functions	37
WiFi Settings	38
WiFi Additional Options	39
Display	40
App Notifications	41
Sound	42
Apps	43
App Settings	44
Apps Additional Options	44
Memory and USB	45
RAM Memory	45
Location	46
Users	46
Languages and Input	47
Add a Language	47-48
Date and Time	49
Vehicle Settings	50-51
Park Assist	50
Front OPS	50
Steering Wheel Buttons	50
Climate Control Display	50
Open Navigation on Start-Up	50
Updating the MCU	51
System Update	51
Factory Settings	51
Device Information	52
Troubleshooting	53



WARNING

Driver distraction can lead to accidents and injuries. Operating the RADICAL system may distract the driver's attention from the prevailing traffic conditions! Connecting, changing or inserting data carriers may equally distract the driver's attention from the prevailing traffic conditions.

WARNING

Always ensure that loudspeaker volume allows sounds from outside the vehicle to be heard at all times (e.g. signal horns or sirens).

WARNING

Incorrect assembly or installation of the RADICAL system may result in damage to the RADICAL system or to the vehicle electronics. The device should only be installed by qualified personnel, authorized by RADICAL.

CAUTION

This RADICAL system is intended solely for operation with an on-board voltage of 12 V DC. Operating the RADICAL system at any other on-board voltage may result in damage to the RADICAL system or to the vehicle electrical system.

CAUTION

Dismantling or modifying the RADICAL system may result in damage to the device or the vehicle. Opening or modifying the device by personnel not authorized by RADICAL will invalidate the warranty.

In the event of a malfunction or fault, please contact an authorized RADICAL dealer.
Repairs carried out by unauthorized personnel will invalidate the warranty.



CAUTION

Charging and connecting cables for mobile devices may cause an obstruction to the driver. These should be positioned to ensure that the driver's movement is not impeded.

CAUTION

The driving recommendations and traffic signs displayed on the RADICAL system may differ from the actual situation. Traffic signposts and traffic regulations take precedence over the driving recommendations and signs displayed on the RADICAL system.

Adapt your driving behaviour and speed to the prevailing visibility, weather, road and traffic conditions.

AUTOMATIC ON/OFF


The RADICAL system is switched on with vehicle ignition. The RADICAL system is switched off when the ignition is turned off or when the ignition key is removed.

NOTE

Pressing the power button on the front of the device does not switch it off. This only turns the screen off; the power connection to the device is maintained.




HOME SCREEN

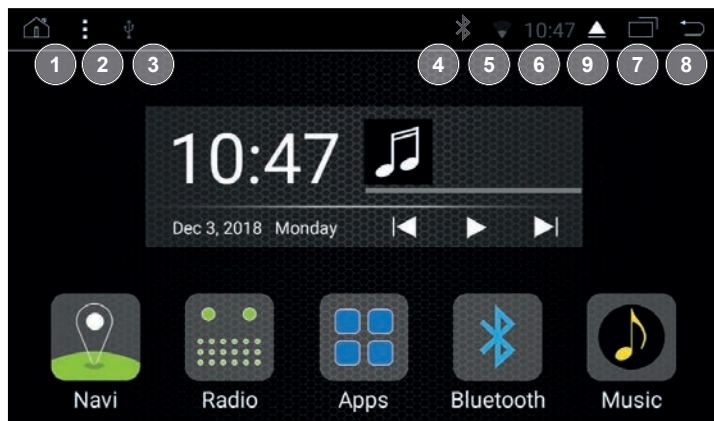


1. Home
2. Additional options
3. USB connection status
4. Bluetooth connection status
5. WiFi connection status
6. Time
7. Task manager
8. Back
9. Eject CD (only for models with CD drive)


HOME SCREEN NAVIGATION

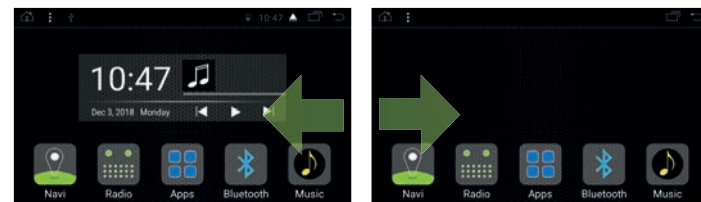

You can flick through the pages of the home screen by swiping to the left or right.

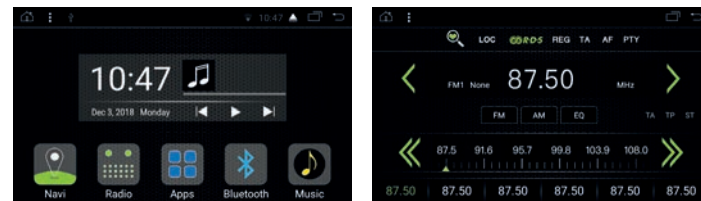

Tap on the relevant icon on the home screen to access the desired function.


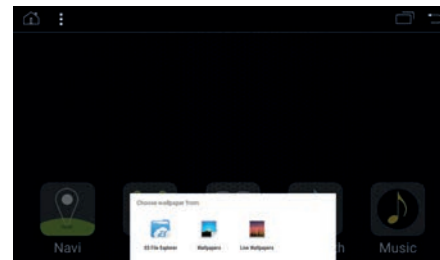


The wallpaper can be changed by pressing and holding on a blank area of the home screen.





HOME SCREEN

You can access the quick menu by swiping downwards.

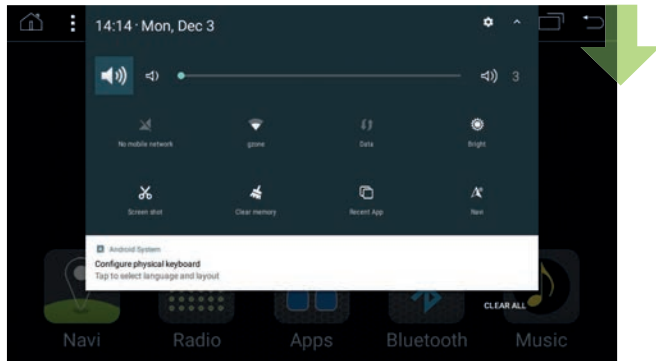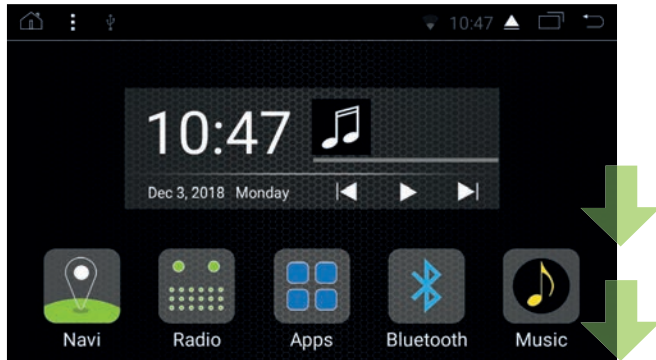

Many settings can be quickly accessed through the quick menu, such as the brightness of the screen.


The task manager icon opens the task manager

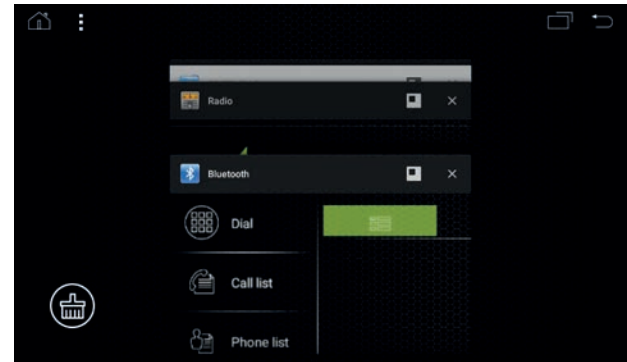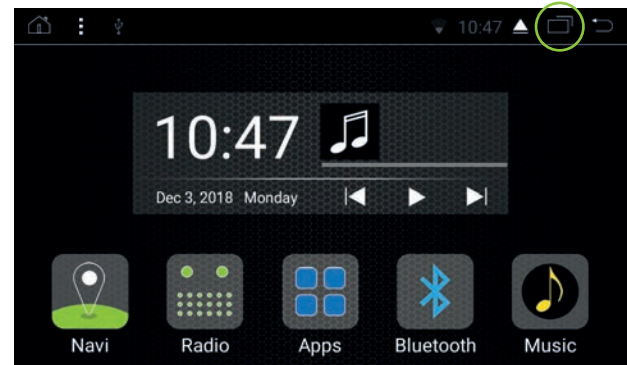


APPS AND WIDGETS

APPS



You can open the apps list page by tapping the apps icon.

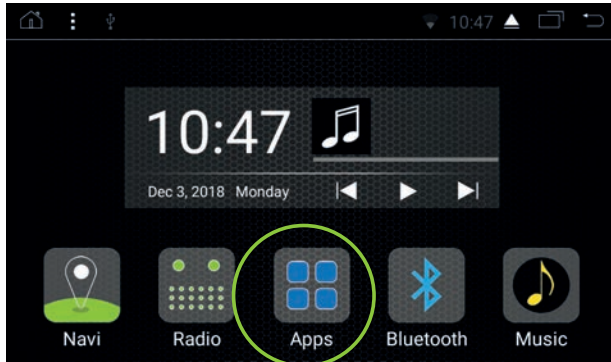

All installed apps are displayed on the apps list page.

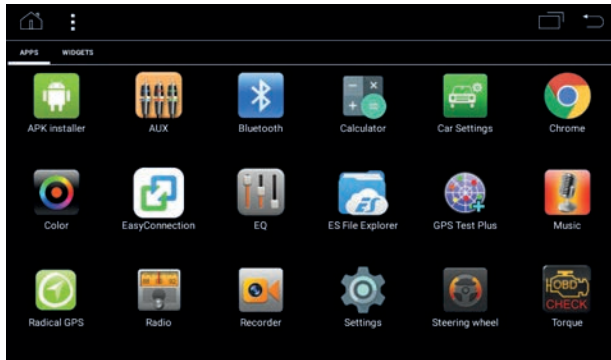


By pressing and holding on an app icon, the app icon can be pinned to the home screen.

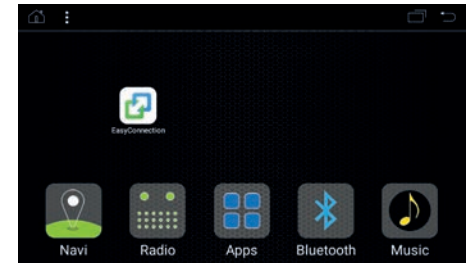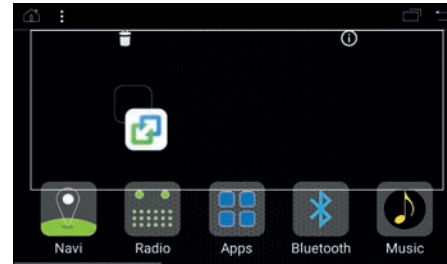


APPS AND WIDGETS

To remove the app icon from the home screen, press and hold the icon and drag it to the trash.

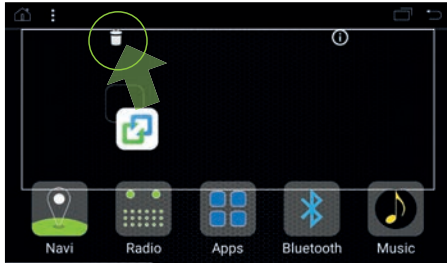


You can open an app by tapping on it.

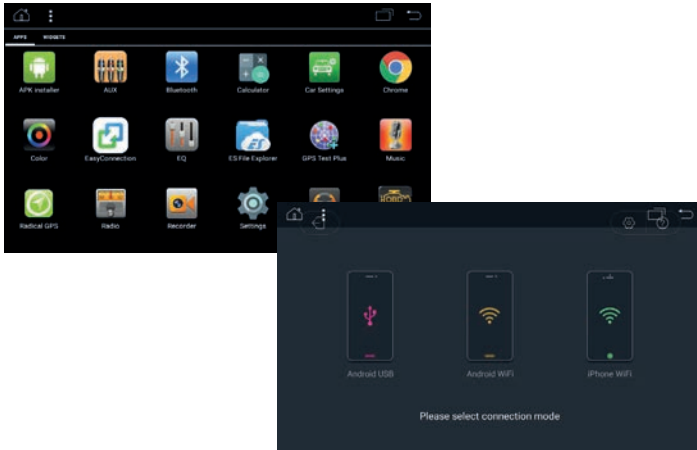


WIDGETS

Tap on the widget tab to open the widget list page.

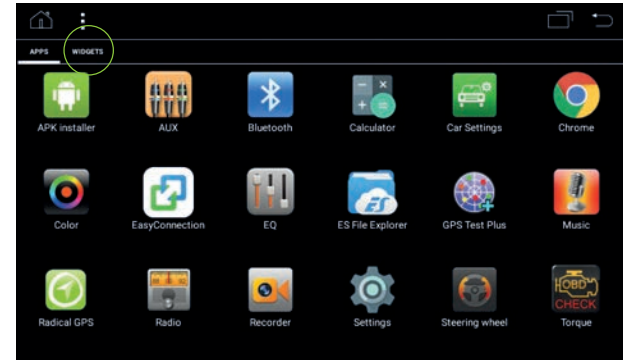

All installed widgets are displayed on the widget list page.

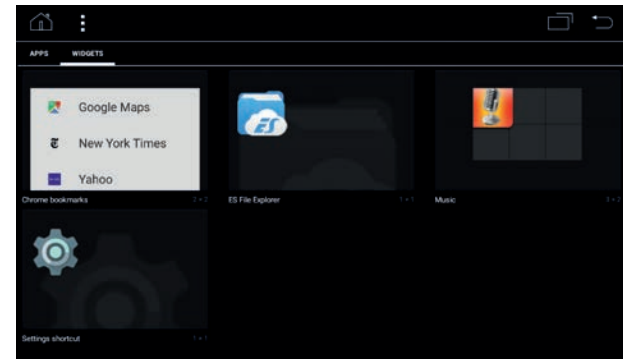

TUNER APP



Functions

- | | |
|--------------|--|
| 1. FM | Tap to switch between the different bands (FM1 > FM2). |
| 2. AM | Tap to switch to AM radio |
| 3. Scale | Slide to change the frequency |
| 4. Preset | Tap to chose the preset |
| 5. EQ | Tap to open the equalizer |
| 6. DX/LOC | Tap to switch between DX and LOC |
| 7. Auto scan | Tap to start automatic scanning for stations |
| 8. PREV/ | Downward adjustment Press to search in lower frequencies |
| 9. NEXT/ | Upwards adjustment Press to search in higher frequencies |
| 10. PREV/ | Downward adjustment Press to decrease by 50 kHz |
| 11. NEXT/ | Upwards adjustment Press to increase by 50 kHz |
| 12. RDS | Tap to activate/deactivate RDS functions |
| 13. REG | Tap to switch on regional function |
| 14. AF | Tap to activate alternative frequency |
| 15. PTY | Tap to activate search by program type |
| 16. TA | Tap to activate/deactivate traffic announcements |


Information Fields

- | | |
|-----------------------|-----------------------------|
| 17. Band display | Shows the current band |
| 18. Frequency display | Shows the current frequency |

ABBREVIATIONS

- | | |
|-----|---|
| REG | Activates search for regional stations with a strong signal |
| DX | Stands for distance or distant exchange: means that stations in the wider vicinity will be searched for. These stations usually have a weaker signal. |
| LOC | Stands for local: means that stations in the closer proximity will be searched for. These stations usually have a very strong signal. |
| TA | Stands for traffic announcements. |
| AF | Stands for alternative frequency: means that the same station will be searched for on another frequency. |
| PTY | Stands for program type: describes the division of stations according to categories. |



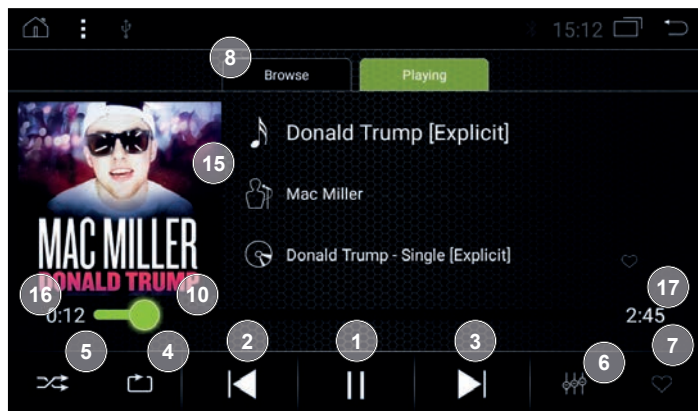


Functions

- | | |
|--------------------|--|
| 1. Play/pause | Tap to play or pause the current track. |
| 2. Previous track | Tap to start the current track from the beginning again, tap again to go back to the previous track. |
| 3. Next track | Tap to go to the next track. |
| 4. Repeat | Tap once: repeat all tracks ► tap again: repeat a single track ► tap again: repeat off |
| 5. Shuffle | Tap once: shuffle on ► tap again: shuffle off |
| 6. Equalizer | Tap to open the equalizer |
| 7. Favourites | Tap to add to favourites list |
| 8. Browse | Tap to switch to the file view |
| 9. Internal memory | Tap to see the internal memory file. |
| 10. Progress bar | Tap to move to a specific position |
| 11. Playlist | Tap to see the file currently playing |
| 12. Ext SD | Tap to see the file for the connected SD card |
| 13. USB | Tap to see the file for the connected USB stick |
| 14. Favourites | Tap to open the favourites list |

Information Fields

- | | |
|-----------------------------|--|
| 15. ID3 tag and album cover | ID3 tag and album cover display (if available) |
| 16. Time played | |
| 17. Entire length | |



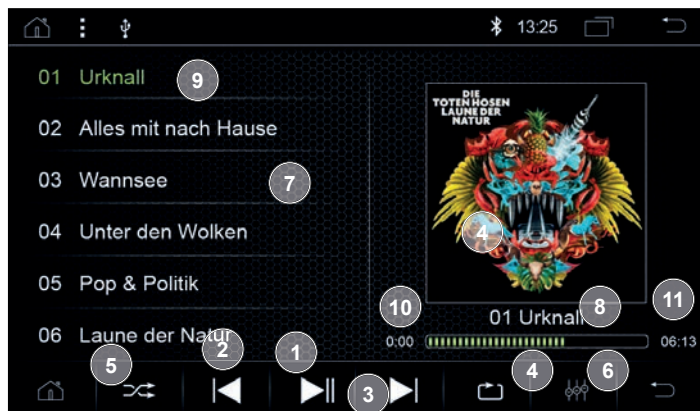

Functions

- | | |
|-------------------|---|
| 1. Play/pause | Tap to play or pause the current track |
| 2. Previous track | Tap to start the current track from the beginning again, tap again to go back to the previous track |
| 3. Next track | Tap to go to the next track |
| 4. Repeat | Tap once: repeat all tracks ► tap again: repeat a single track ► tap again: repeat off |
| 5. Shuffle | Tap for shuffle on ► Tap again: shuffle off |
| 6. Equalizer | Tap to open the equalizer |
| 7. Track list | Tap on the desired track to play it. |

Information Fields

- 8. Progress bar
- 9. Current track
- 10. Time played
- 11. Entire length



Functions

- | | |
|-----------------|--|
| 1. Play/pause | Tap to play or pause the current video |
| 2. Rewind | Tap to rewind |
| 3. Fast forward | Tap to fast forward |
| 4. Progress bar | Tap to move to a specific position |
| 5. Zoom | Tap to switch to full screen display |
| 6. Favourites | Tap to add to favourites list |
| 7. List | Tap to open the list |

Information Fields

- 8. Time played
- 9. Entire length



BLUETOOTH

PAIRING A BLUETOOTH DEVICE

1. Tap on the Bluetooth icon to start the Bluetooth function.
2. Press the settings icon to see the device names and password for Bluetooth pairing.
3. Activate Bluetooth on your mobile phone and check that your device is set to visible.
4. Select the BT devices icon on your RADICAL device.
5. Tap the search icon to look for Bluetooth devices in your vicinity.
6. The name of your mobile device should now be shown in the list. Tap on the name of your device to start the pairing process.
If your device is not listed, try searching again for Bluetooth devices in your vicinity.
7. You should now see a pairing message on your mobile phone. Enter the password for Bluetooth pairing into your mobile phone (RADICAL standard-password: 1234).
8. When your mobile phone has been paired, tap on the phone book icon and then on the import icon to import your contacts. (N.B. Android users will see a message on their mobile phone requesting authorization. Confirm with 'authorize'.)
(N.B. iOS users must manually activate synchronization in the connection menu of their mobile phone.)

DEVICE MANAGER FUNCTIONS



- | | |
|------------------------|---|
| 1. Device manager list | Tap to open the list of paired devices |
| 2. Search | Tap to start the search for Bluetooth devices in the vicinity |
| 3. Unpair | Tap to unpair the devices connected by Bluetooth |
| 4. Delete | Tap to delete all paired devices |
| 5. Number pad | Tap to call up the number pad |
| 6. Call history | Tap to open call history |
| 7. Phone book | Tap to open the phone book |
| 8. BT music | Tap to open BT music |
| 9. Device manager | Tap to open the device manager |
| 10. Settings | Tap to open Bluetooth settings |


Device Manager Information Fields

11. Paired devices
12. Connection symbol



BLUETOOTH

PHONE BOOK FUNCTIONS

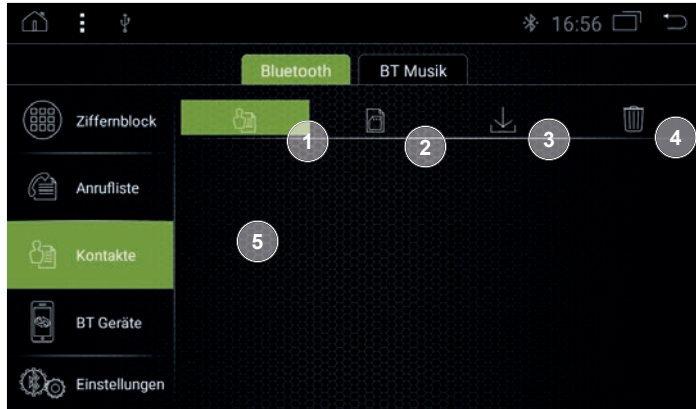


- | | |
|---------------------------------|--|
| 1. Phone book (internal memory) | Tap to open the phone book stored in the internal memory of the connected smartphone |
| 2. Phone book (SIM card) | Tap to open the phone book stored on the SIM card of the connected smartphone |
| 3. Import | Tap to manually update the phone book |
| 4. Delete | Tap to delete the entries in the phone book (only from the RADICAL device) |

Phone book Information Fields

5. Phone book entries Slide up or down to scroll through entries.

BLUETOOTH MUSIC (A2DP) FUNCTIONS

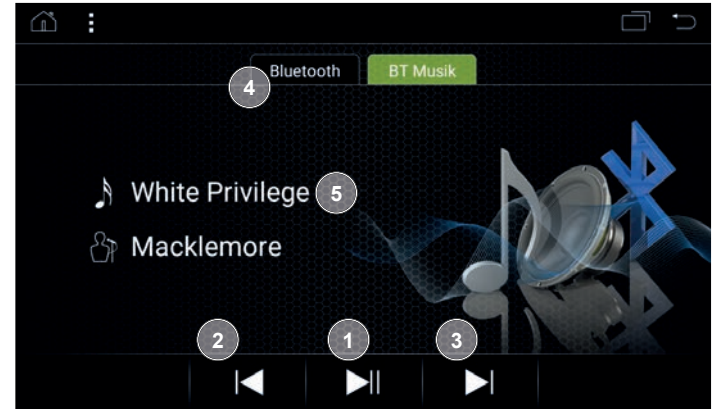

- | | |
|-------------------|---|
| 1. Play/pause | Tap to play or pause the current track |
| 2. Previous track | Tap to start the current track from the beginning again, tap again to go back to the previous track |
| 3. Next track | Tap to go to the next track |
| 4. Bluetooth | Tap to switch to Bluetooth |


Bluetooth Music Information Fields

5. Artist and track details



BLUETOOTH

CALL HISTORY FUNCTIONS

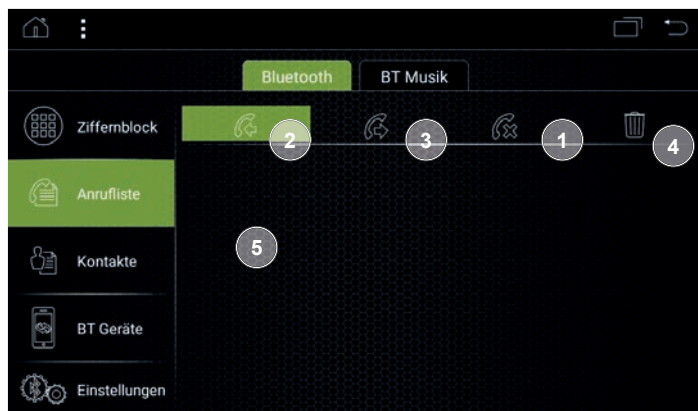

- | | |
|-------------------|--|
| 1. Missed calls | Tap to see missed calls |
| 2. Received calls | Tap to see received calls |
| 3. Outgoing calls | Tap to see outgoing calls |
| 4. Delete | Tap to delete the entries (only from the RADICAL device) |

Call History Information Fields

- | | |
|------------|---|
| 5. Entries | Slide up or down to scroll through entries. |
|------------|---|

NUMBER PAD FUNCTIONS




- | | |
|------------------|--|
| 1. Dial | Tap to make a call |
| 2. Hang up | Tap to end a call |
| 3. Switch output | Tap during call to switch output between mobile phone and vehicle loudspeakers |
| 4. Numbers | Tap to enter a number |
| 5. Delete | Tap to delete the last entry |

Call History Information Fields

- | |
|------------|
| 6. Display |
|------------|




BLUETOOTH SETTINGS

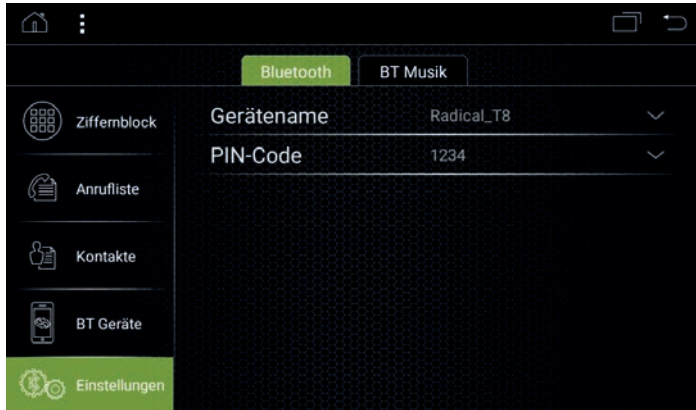

This is where you can change your device name and password for Bluetooth connections.

SELECTION SCREEN

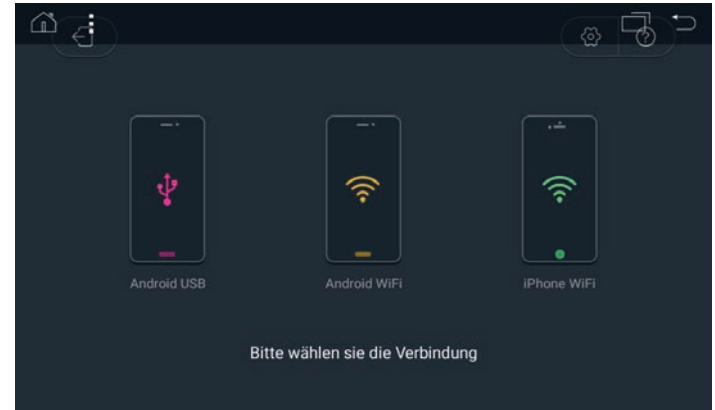

This is where you can choose the type of connection.




EASY CONNECTION

ANDROID USB CONNECTION (INITIAL CONNECTION)



1. Go to settings on your smartphone.
2. Activate the developer options on your Android smartphone.
3. Activate USB debugging.
4. Open the Easy Connection function.
5. Select Android USB.
6. Connect your smartphone to your RADICAL device via USB.
(For first-time connections, your smartphone must be connected to the internet.)
7. Download and install the Easy Connection App from the Google Play Store.
8. The Easy Connection App is automatically started after connecting to the RADICAL device, thus establishing the connection.

SELECTION SCREEN

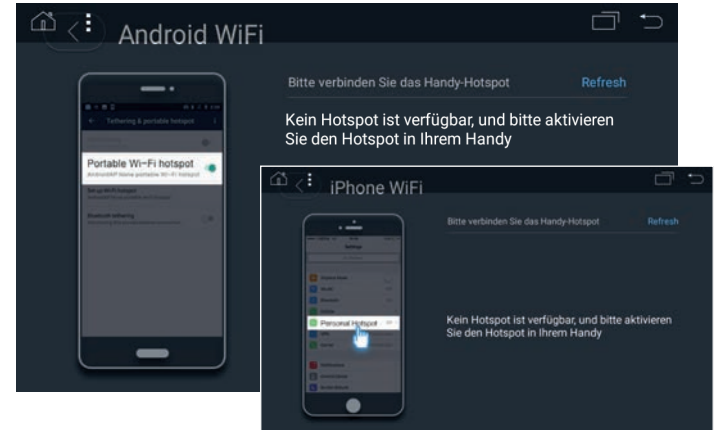


1. Go to the connection settings on your smartphone.
2. Activate mobile hotspot.
3. Open the Easy Connection function.
4. Select Android WiFi if you use an Android smartphone, or iPhone WiFi if you use an iOS smartphone.
5. Connect your RADICAL device to your smartphone's WiFi hotspot.
6. Activate the Airplay function on your iPhone. This will enable mirroring and the device can be operated through your smartphone. For Android devices, connect your smartphone to the RADICAL device via USB (first-time connection via USB must already have been done see pg. 28), maintain the USB connection until the Easy Connection APP has started on your smartphone and can be seen on your RADICAL device. You can now disconnect the USB; the smartphone is mirrored, and the device can be operated through the RADICAL device, or if preferred, through your smartphone.



EQUALIZER/ZONE

EQUALIZER FUNCTIONS

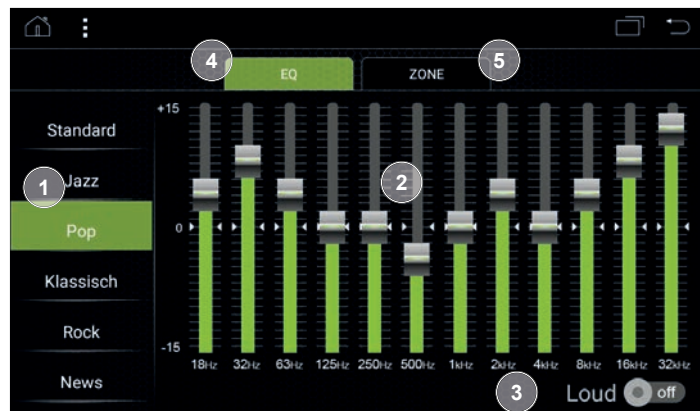

1. Presets Tap the desired preset to load the corresponding equalizer preset settings
2. Frequencies Slide up or down to adjust
3. Loud Tap to activate/deactivate loudness
4. EQ Tap to open the equalizer page
5. Zone Tap to open the zone page

ZONE FUNCTIONS




1. Presets Tap the desired preset to load the corresponding equalizer preset settings
2. Subw. Slide up or down to adjust
3. Loud Slide up or down to adjust
4. Balance point Move position to change the balance
5. Balance Tap to position balance in the centre
6. EQ Tap to open the equalizer page
7. Zone Tap to open the zone page




APK INSTALLER

1. Download the desired APK and copy onto an external medium of your choice.
2. Connect the external medium to your RADICAL device.
3. Open the APK installer.

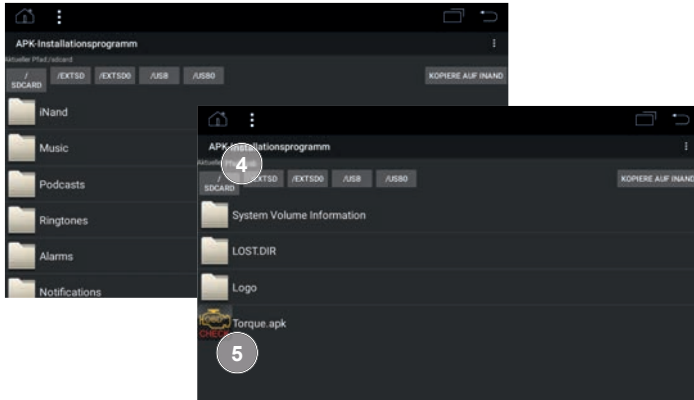


4. Select the external medium tab.
5. Tap on the APK that you wish to install.

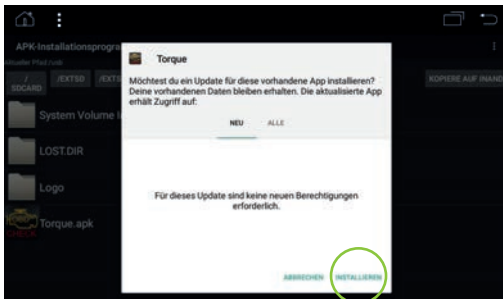


6. Then press install.

7. The APK will now be installed.

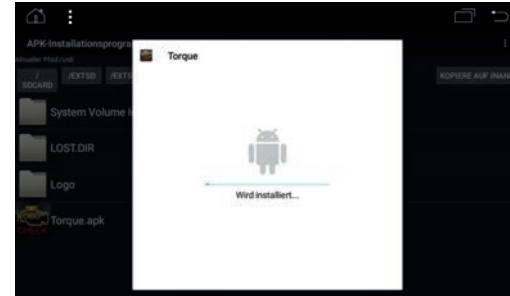

8. After the APK has been installed, you can either open the APK directly, or complete the process by pressing FINISHED.

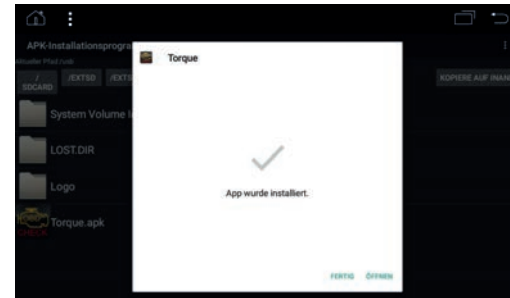


9. You will now see the APK in the apps list.



STEERING WHEEL BUTTONS

You can configure the steering wheel remote control buttons with the steering wheel app.

1. Open the steering wheel app.

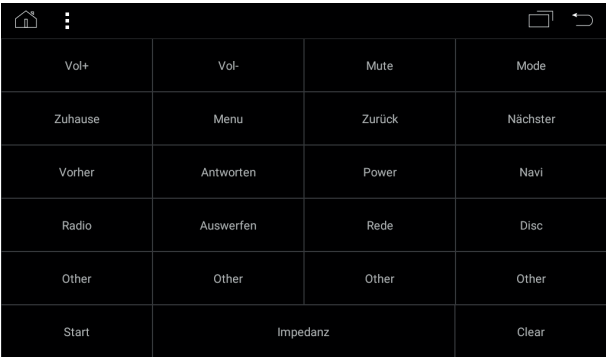

Vol+	Vol-	Mute	Mode
Zuhause	Menu	Zurück	Nächster
Vorher	Antworten	Power	Navi
Radio	Auswerfen	Rede	Disc
Other	Other	Other	Other
Start	Impedanz		Clear

2. Press start (the operation will light up in yellow).




Vol+	Vol-	Mute	Mode
Zuhause	Menu	Zurück	Nächster
Vorher	Antworten	Power	Navi
Radio	Auswerfen	Rede	Disc
Other	Other	Other	Other
Start	Impedanz		Clear

3. Now select the function that you wish to configure (the function will light up in yellow).



Start	Vol-	Mute	Mode
Zuhause	Menu	Zurück	Nächster
Vorher	Antworten	Power	Navi
Radio	Auswerfen	Rede	Disc
Other	Other	Other	Other
Start	Impedanz		Clear

4. Press the corresponding steering wheel remote control button.




Start	Vol-	Mute	Mode
Zuhause	Menu	Zurück	Nächster
Vorher	Antworten	Power	Navi
Radio	Auswerfen	Rede	Disc
Other	Other	Other	Other
Start	Impedanz		Clear

5. Then press End. The steering wheel remote control button is now configured.



SETTINGS

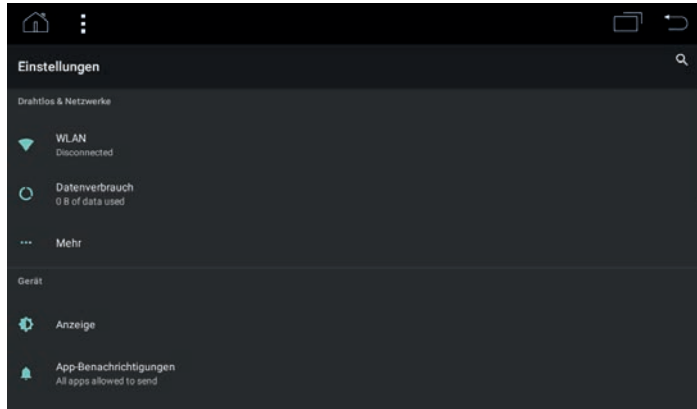

WIFI FUNCTIONS


1. Available WiFi networks.
2. Add network
3. Settings
4. Additional options
5. ON/OFF
6. Settings list

Tap on the appropriate network to establish a connection
Tap to manually add a network
Tap to open the WiFi settings
Tap to open the WiFi additional options
Tap to turn WiFi on/off
Tap to quickly move to another settings menu

WiFi Information Fields


7. Menu display
8. Connection status

Indicates which menu you are in

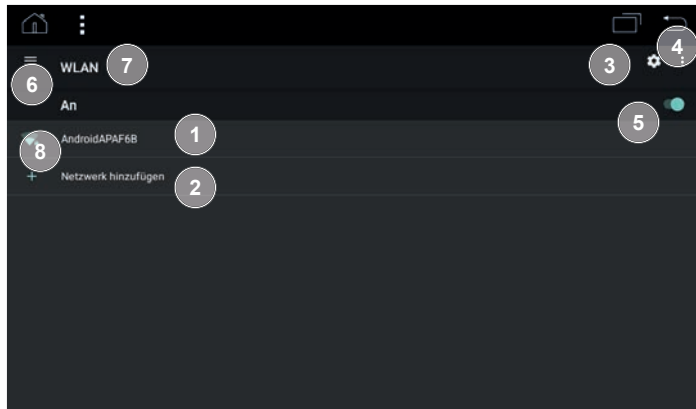

SETTINGS

WIFI SETTINGS

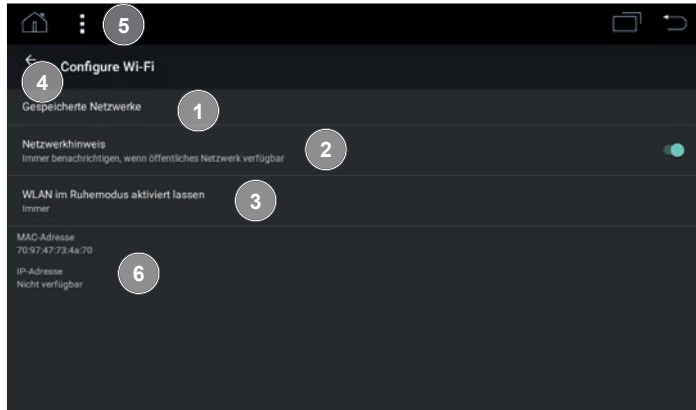


1. Saved networks
Tap to display the saved networks
2. Network notifications
Tap to switch notifications for WiFi on/off
signal should remain in standby mode
3. Activate WiFi during sleep
Tap to select whether WiFi
signal should remain in standby mode
4. Back
Back to WiFi page information fields
WiFi Settings

WiFi Information Fields

5. Menu display
Indicates which menu you are in
6. MAC and IP address display

WIFI ADDITIONAL OPTIONS

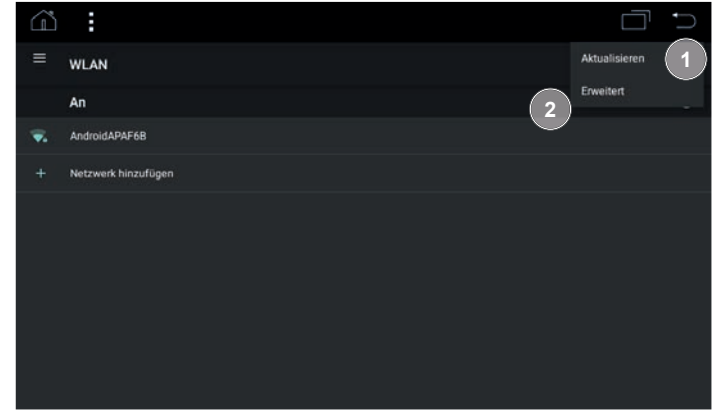


1. Reset
Resets network search
2. Advanced settings
Opens the advanced settings



SETTINGS

DISPLAY

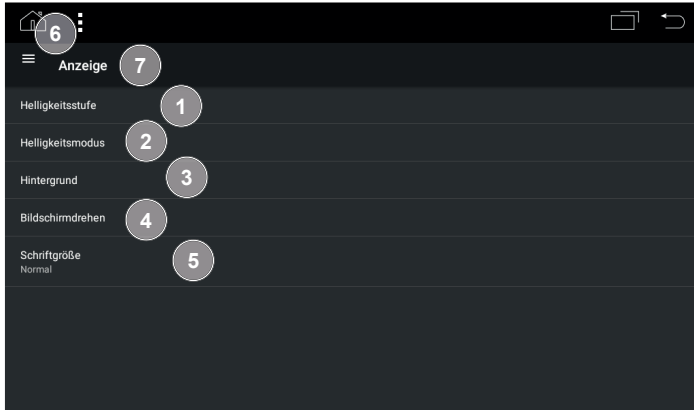


- | | |
|---------------------|---|
| 1. Brightness level | Tap to adjust the brightness level |
| 2. Brightness mode | Tap to change the brightness mode from auto ► light ► dark |
| 3. Wallpaper | Tap to change the wallpaper |
| 4. App orientation | Tap to change the orientation of apps (default setting landscape) |
| 5. Font size | Tap to modify the font size |
| 6. Settings list | Tap to quickly move to another settings menu |

Information Fields

- | | |
|-----------------|---------------------------------|
| 7. Menu display | Indicates which menu you are in |
|-----------------|---------------------------------|

APP NOTIFICATIONS

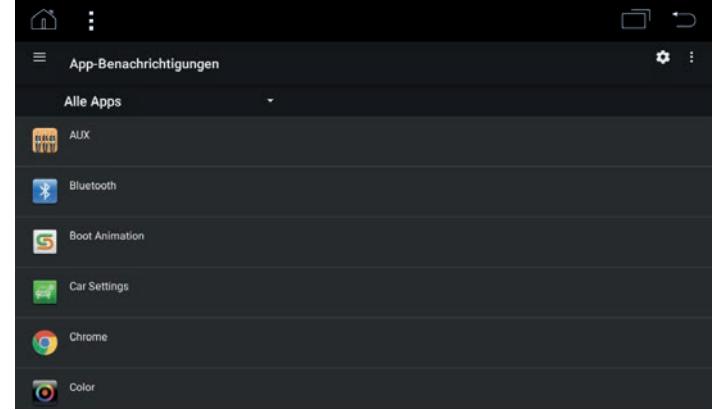


You can select which apps may send notifications on the app notifications page




SETTINGS

SOUND

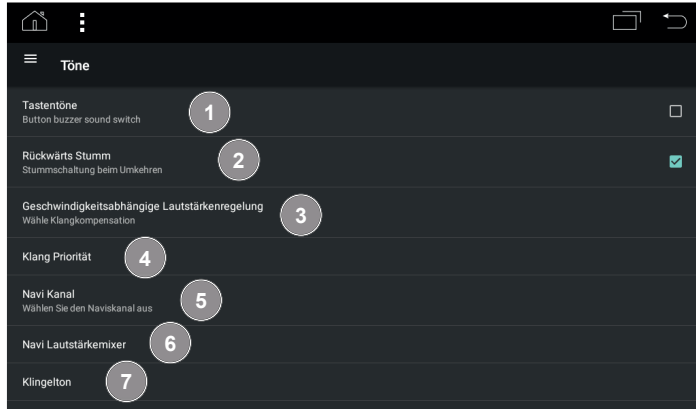

- | | |
|-----------------------------------|--|
| 1. Key tones | Tap to switch key tones on/off |
| 2. Mute when reversing | Tap to switch sound on/off when reversing |
| 3. Speed-dependent volume control | Tap to choose between low, middle and high |
| 4. Audio priority | Tap to change the audio priority between system, external apps and intelligent |
| 5. SatNav distribution | Tap to switch between all or front only |
| 6. SatNav volume | Tap to adjust volume for announcements from the navigation system |
| 7. Ringtone | Tap to change the ringtone |

APPS

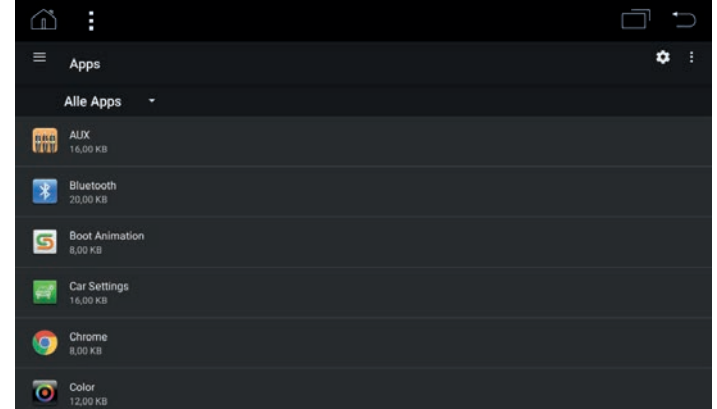


You can manage your installed apps on this page.
Here you can also uninstall apps that have been installed.



SETTINGS


APP SETTINGS

Default apps can be set in the app settings.

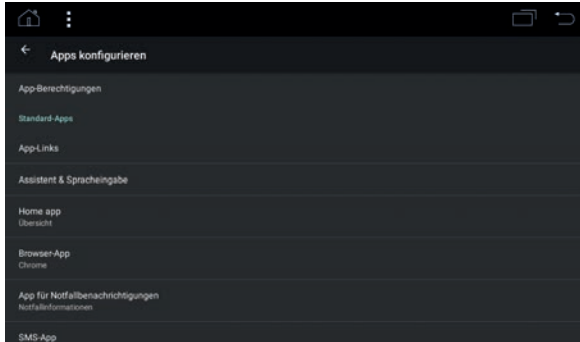


APPS ADDITIONAL OPTIONS

Under additional options, you can activate 'show system processes' or 'reset app settings'.

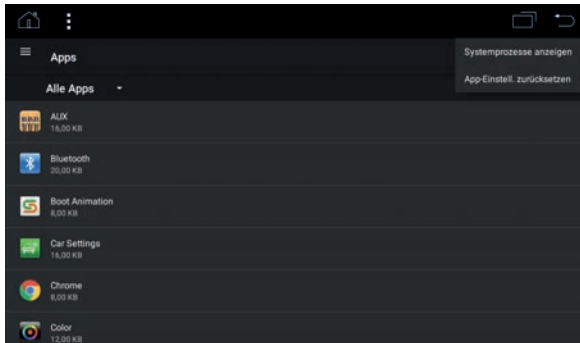


MEMORY AND USB

Here you can see information about the internal memory and any external memory device connected.

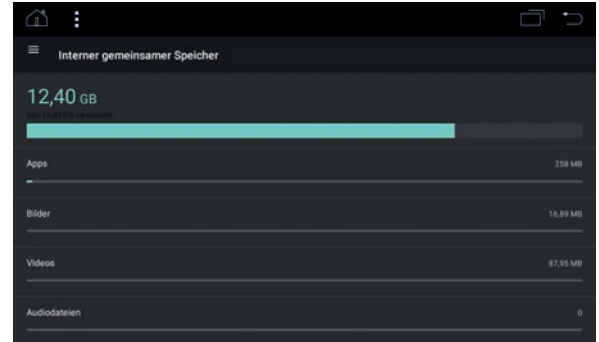

RAM MEMORY


Here you can see information about the internal RAM memory.

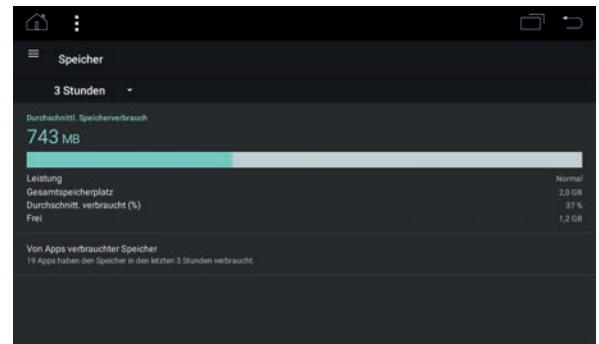

SETTINGS

LOCATION

This page shows which apps have access to location information.

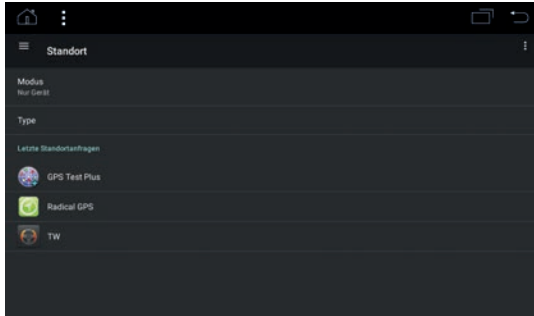


You can refuse an app's access to location information.

Note: Some apps, for example navigations apps, cannot function correctly without location authorization.


USERS

User accounts can be managed here.

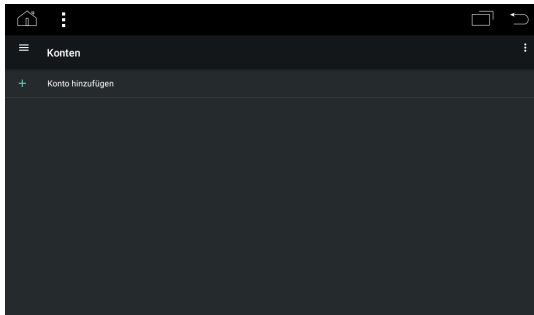


LANGUAGES AND INPUT

Here you can change or add the keyboard and/or dictionary language.

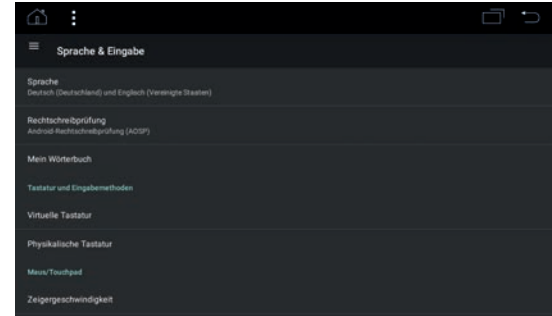


Change or add language

Press on language to open the language list.

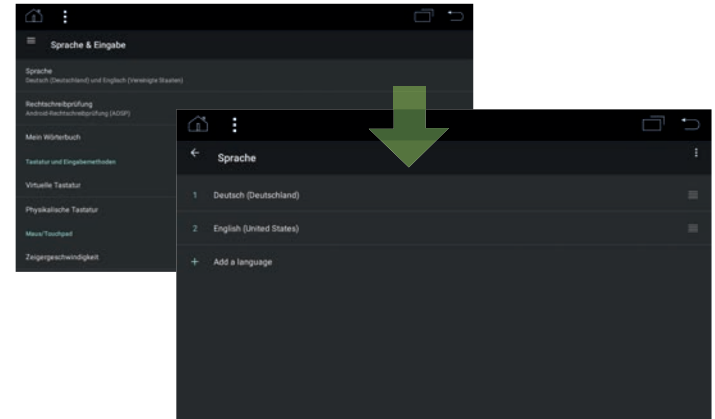


SETTINGS

You can add a new language to the list by selecting 'add language'.

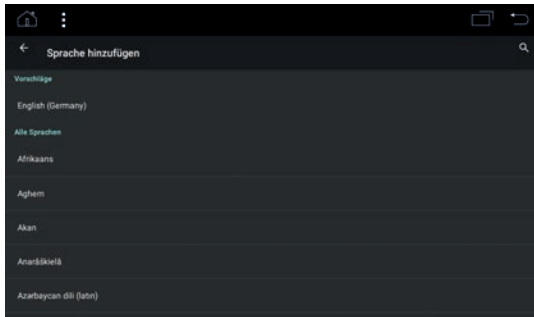

Select the language that you wish to add to the list.

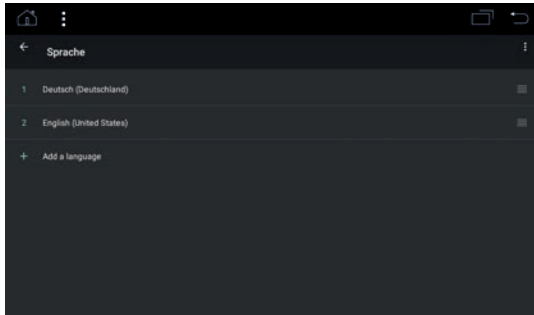


The position of the languages shows the order in which the languages are placed: The primary language which is also the display language is placed first.

To use a different language as the display language, press on the desired language and drag it into the first place.


DATE AND TIME

All date and time settings can be managed here.

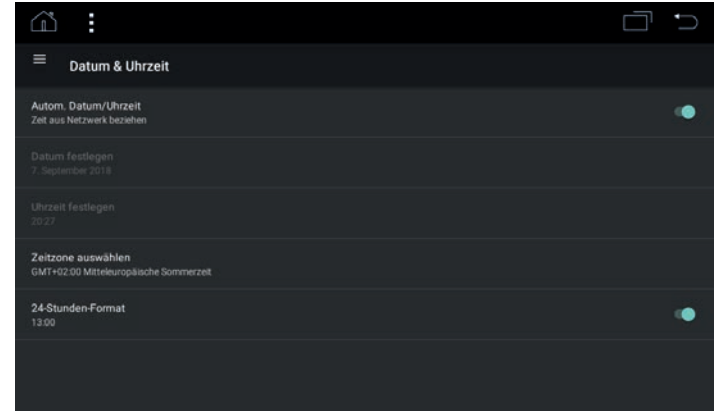

SETTINGS

VEHICLE SETTINGS

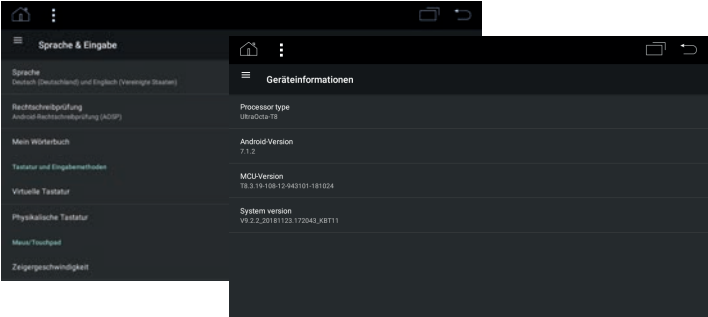

PARK ASSIST

You can set the display source in Park Assist. You can choose between All OFF, CAM+OPS, and OPS. (Please note that display source OPS is only possible with RADICAL devices that support this, along with an original equipment installed OPS.)

FRONT OPS

Front OPS switches the front OPS display on/off. (Please note that display source OPS is only possible with RADICAL devices that support this, along with an original equipment installed OPS.)

STEERING WHEEL BUTTONS

Steering wheel buttons opens the steering wheel app (see chapter 13.0).

CLIMATE CONTROL DISPLAY

The climate control display button allows you to turn it on/off. (Please note that climate control display is only available with RADICAL devices that support this, along with an original equipment installed automatic climate control system.)

OPEN NAVIGATION ON START-UP

Under open navigation on start-up, you can select if the navigation system should automatically open when the device is turned on.

UPDATING THE MCU

You can start a software update of the MCU by selecting MCU Update. **Note:** Software Updates are published at and can be downloaded from my-radical.com.

SYSTEM UPDATE

You can start a system software update by selecting this option. **Note:** Software Updates are published at and can be downloaded from my-radical.com.

FACTORY SETTINGS

By selecting restore factory settings, you can reinstate the device's original settings. This may delete any changes to settings that have been made.


If you press on restore factory settings, you will be asked to submit a password (0120). Enter the password and confirm with OK to reinstate the device's factory settings.

CAUTION: If the factory settings are restored on the device, all pre-installed apps will be deleted. These must then be installed again manually. You can find the APKs for the preinstalled apps at: <http://my-radical.com/radical-support/apk-s/>



DEVICE INFORMATION

Here you can see all the details of the software that is installed on the device.

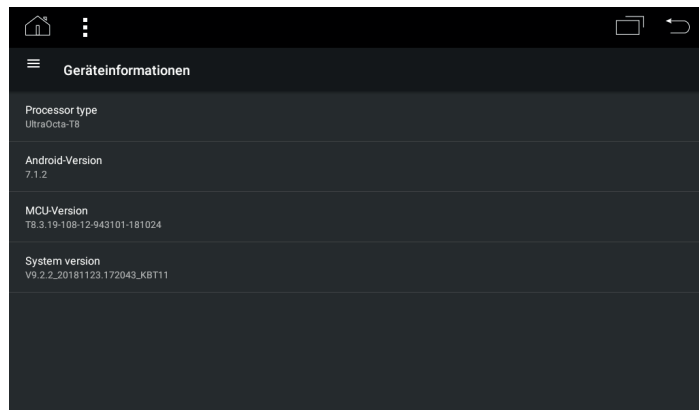

Problem	Cause	Solution
No power supply (Cannot switch device on)	Device not properly connected	Check cable connection, if necessary, contact dealer
	Faulty fuse	Check cable connection and swap fuse, if necessary, contact dealer
No sound from vehicle loudspeakers	Loudspeakers not connected properly	Check cable connection, if necessary, contact dealer
	External amplifier not connected properly	Check cable connection, if necessary, contact dealer
Operation no longer possible	System software has been modified	Press reset pin and restore device to factory settings (see chapter 14.12.G)
	Third party installed app has caused system software crash	Press reset pin and restore device to factory settings (see chapter 14.12.G)
Vehicle functions not available (e.g. steering wheel remote controls, hand brake signal, reverse signal, etc.)	CAN module not connected properly, or defective	Check cable connection to CAN module, if necessary, contact dealer

Note:

If you have any further questions or problems please check the FAQs for your RADICAL device.

You can find these at www.my-radical.com



STATUTORY RIGHTS AND WARRANTY

Dear customer,

Please read the warranty terms below carefully.

Should your RADICAL product require warranty service, please return it to the retailer from whom it was purchased or else, the distributor of your country. Do not send-in any product to RADICAL directly.

This RADICAL product is protected against defective materials and/or improper workmanship by a manufacturer warranty for the period of 2 years from date of purchase at retail, to the original buyer.

The statutory consumer protection regulation („EU statutory warranty“) remains unaffected by the provided manufacturer product warranty.

For the treatment of warranty related claims, the dealer / importer needs to register the device with an RMA number and provide a valid product serial number together with the original slip of purchase or the invoice, showing the purchase date.

Not covered by the manufacturer warranty are damages due to:

1. Unauthorized or unapproved installation, incorrect audio or mains connection(s).
2. Defects caused by exposure of product to moisture, water and organic fluids (“solvents”), excessive heat and prolonged exposure to sun rays, as well as excessive dirt or dust.
3. Mechanical defects caused by accidents, fall or impact.
4. Damage due to unauthorized repair attempts and modifications of product not explicitly authorized by the manufacturer.
5. Damage caused by normal “wear and tear” over time.

This warranty is limited to the repair or the replacement of the defective product at the manufacturer's option and does not include any other form of damage, whether incidental, consequential or otherwise.

Damages caused by improper packaging during transportation of product back to dealer or importer are not covered under the warranty. Any compensation claims of consequential damages to other auxiliary devices

or components in the dashboard caused by the device directly or indirectly, are excluded.

Not covered by the manufacturer are consequential costs arising from handling of product to conduct warranty service labor like for example the un-installation and re-installation of devices, to cure a hardware failure or other defect.

My-Radical.com

EU Legal Representative:

ACR S & V GmbH · Industriestraße 35 · D-79787 Lauchringen · Germany
RADICAL · Bohrturmweg 1 · CH-5330 Bad Zurzach · Switzerland





by ACR AG · Bohrturmweg 1 · Bad Zurzach · Switzerland
www.my-radical.com