

Salt Aroom diffuser

User guide

Salt Aroom diffuser uses ultrasound to diffuse water, essential oils and rock salt to produce pleasant, fragrant and cool mist.

READ THE WHOLE USER GUIDE BEFORE OPERATING THE MACHINE AND STORE THE INSTRUCTIONS FOR YOUR REFERENCE.

Cleaning & maintenance

Cleaning: clean the machine weekly in the following way for best results


1. Unplug the power cord first from the machine and then from the wall outlet
 2. Pour all the water out from the water tank
 3. Use a clean, damp, soft cloth that does not leave any fibres behind and only a few drops of mild detergent or soap. Wipe the inside of the water tank. Use a cotton swab to clean the ultrasound plate and its surroundings.
 4. Rinse the water tank thoroughly to clean out any leftover soap.
- Note: pour out water as indicated in the leftmost picture below. Clean the water tank also when you change one essential oil into another. If you're not using the machine for a long time, clean it and store in a dry, well-ventilated space.



Warnings

- Max. usage period for a single use is 10-16 hours.
- Don't fill water above the MAX level (300 ml).
- Don't open the machine or touch the ultrasound plate while it is running.
- Don't start the machine with an empty water tank.
- Remember to unplug the machine before cleaning.
- Operate the machine on a solid surfaces only. Run the machine on moisture-tolerant materials. Don't operate on soft surfaces (soft rugs or similar surfaces) or surfaces prone to cause the machine to tip over.
- Store the machine in a dry, cool place, when not in use.
- Don't operate near electronic devices that may not tolerate the mist, such as TVs.
- Don't let children or pets play with the device. Oversee the operation by children, old persons or persons with disabilities.

Parts

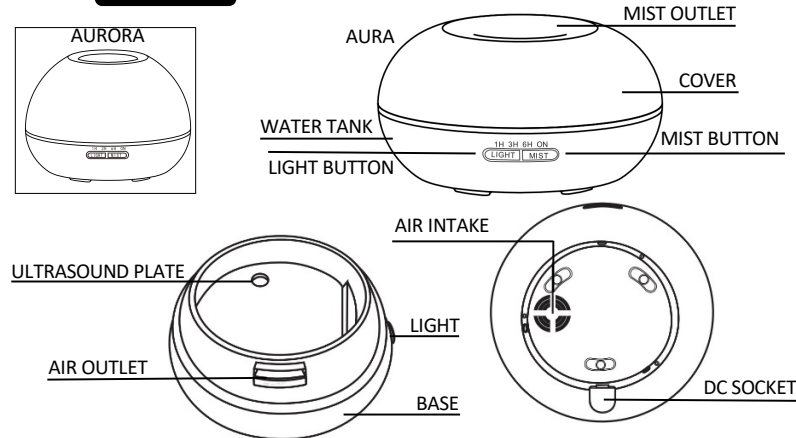

Product information

Power connection	AC 100-240 V (50-60 Hz)/DC 12V 1A
Maximum power	12 W
Materials	ABS+PP
Powercable length	150 cm
Water container volume	300 ml
Accessories	Power cable, User guide
Ultrasound frequency	2.4 MHz

Troubleshooting

If the machine is not functioning normally, please check for a possible solution in the table below before contacting the product importer.

Machine won't start	If not enough water for operation, add up to 300 ml (MAX level) Check the power cable connection.
Machine won't produce mist or mist is abnormal	Check the water level and adjust if necessary (not over 300 ml). If water has been added over the MAX level, pour out all the water and dry the machine parts completely before using again. Check that the ultrasound plate is clean. I not, clean according to instructions. Reassemble and try to start the machine again. Make sure that all the parts have been installed correctly and the fan can turn freely. Check and clean the bottom air intake from any obstruction so that the air can flow freely through the machine.
Machine leaks water out	Make sure all the machine parts are properly installed in their place and that mist can be formed freely. If the machine is operated in too low a temperature or the air humidity in the operating space is too high, the mist can condense back to water. In that case, select an operating space with more optimal operating conditions.

Operation

1. Hold the machine upright and remove the cover straight up.
2. Plug the power cable in the power socket.
3. Use a measuring cup to pour room-temperature water in the tank until the MAX level has been reached. Never add water, salt or oil while the machine is running. Add only 1-2 drops of essential oil and ¼ teaspoonful of rock salt. Only add the indicated amount of oil and salt and use only clean water, essential oil and rock salt.
4. Put the cover back on and make sure it sits properly in its place.
5. Plug the power cable in the wall outlet.
6. Press the mist button to select the running time (1h, 3h, 6h or continuous operation). Fifth button press stops the mist production. 3 sec long press switches the machine off. Press the light button to turn the light on. Pressing the light button will cycle through the different colours of light. 3 sec long press will switch off the light.

If you don't use the machine for a long time, empty the water tank completely and let the machine dry thoroughly. When you take the machine back to use, clean the water tank according to the cleaning instructions.

Importer:
Tuisa Oy
Turuntie 5
21380 AURA
info@tuisa.fi