

MULTIPLAYER 5

User Manual / Instrucciones de Usuario

**WARNING:**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

GRAPHICAL SYMBOLS EXPLANATION


This symbol, wherever used, alerts you to the presence of un-insulated and dangerous voltages within the product enclosure. These are voltages that may be sufficient to constitute the risk of electric shock.



This symbol, wherever used, alerts you to important operating and maintenance instructions. Please read.


WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE TO RAIN OR HUMIDITY. DO NOT REMOVE COVER. THIS PRODUCT IS NOT INTENDED FOR USE OTHER THAN STATED.


1. Read instructions - All the safety and operating instructions should be read before the unit is operated.
2. Retain instructions - The safety and operating instructions should be retained for future reference.
3. Heed warnings - all warnings on the unit and in the operating instructions should be adhered to.
4. Follow instructions - All operations and other instructions should be followed.
5. Water & Moisture - The unit should not be used near water, for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.
6. Carts & Stands - The unit should be used only with a cart or stand that is recommended by the manufacturer. A unit and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the unit and cart combination to overturn. 
7. Grounding or Polarization - Precautions should be taken so that the grounding or polarization is not defeated.
8. Ventilation - The unit should not be situated so that its location or position does not interfere with its proper ventilation. For example, the unit should not be situated on a bed, sofa, rug, or similar surface, that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. Heat - The unit should be situated away from heat sources such as radiators, stoves, or other appliances that produces heat.
10. Power Sources - The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the unit.
11. Power Cord Protection - Power supply cord should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit the unit.
12. Cleaning - The unit should be cleaned only as recommended by the manufacturer.
13. Nonuse Periods - The power cord of the unit should be unplugged from the outlet when left unused for a long period of time.
14. Object and Liquid entry - Care should be taken so that objects do not fall into and liquids are not spilled into the inside of the unit.
15. Damage Requiring Service - The unit should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the unit; or
 - C. The unit has been exposed to rain; or
 - D. The unit does not appear to operate normally or exhibits a marked change in performance.
 - E. The unit has been dropped, or the cabinet damaged.
16. Servicing - The user should not attempt to service the unit beyond those means described in the operating instructions. All other servicing should be referred to qualified personnel.

Overview

Front Panel:

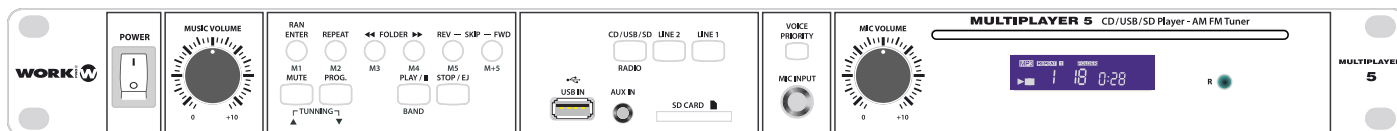


Rear panel:

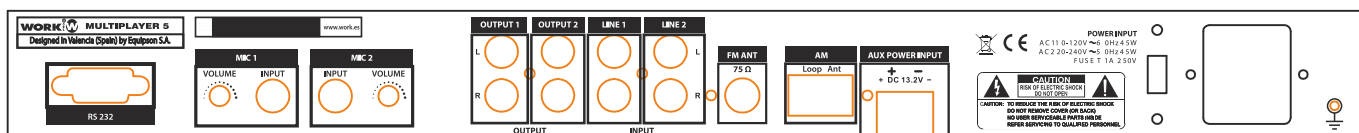



ACCESSORIES:

| | | | |
|---------------------------|-----|-----------------|----|
| AM Antenna Set | x 1 | FM Antenna Wire | x1 |
| RCA-RCA (L-R) Audio cable | x1 | AC Power cord | x1 |
| Remote Controller | x 1 | | |

INSTALLATION:

1. Connect RCA-RCA cable to OUTPUT Terminal.
2. Connect AC Power Cord in between Socket and AC power resource in AC115/ 230V according to local voltage. Remember to place the voltage selector in the proper position. Or connect DC Power Cord in DC13.2V Terminal.
3. Connect RS232 Socket at rear.
4. Connect to Ground 

Anti Shock CD /USB & SD Card Reader AM & FM Tuner

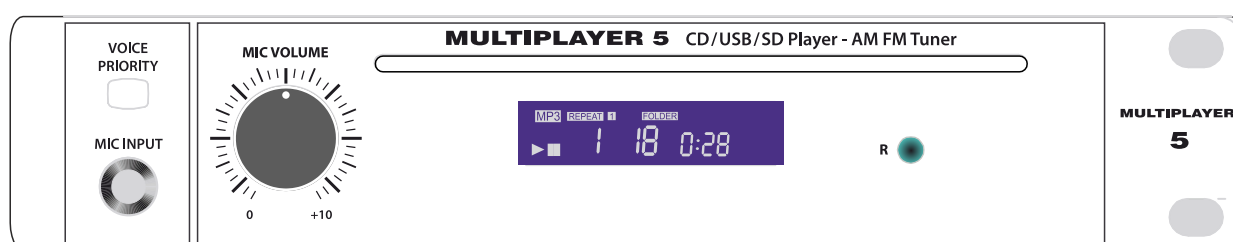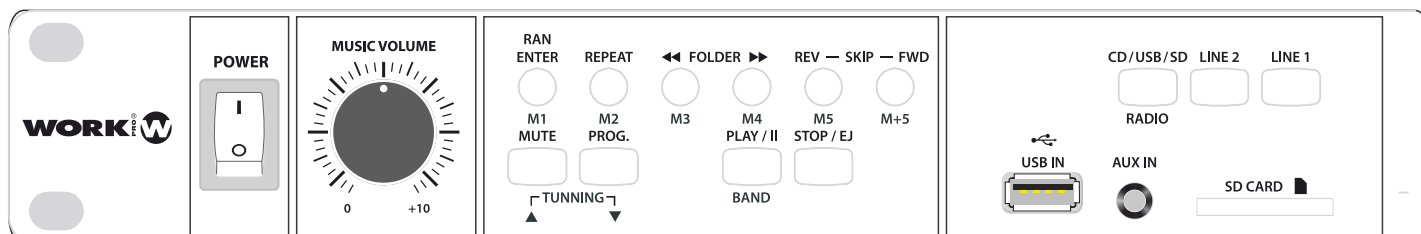

Features

- Offers USB, SD Card, CD and Tuner playing function.
- Able to connect Microphone Input x 3 sets.
- Able to connect external LINE IN source x 2 sets.
- Compatible up to 16G USB, SD card / SDHC
- Accept 12 cm disc, such as CD, CD-R, CD-RW , MP3 disk,
- Playing format: MP3, WMA

Button Instruction & CD / USB / SD READER Operation:

POWER : For switching the system on and off.

VOLUME : For adjusting the volume.

AUX IN : 3.5mm stereo jack for iPod or other audio source

LED ON/OFF : To switch on / off of LED

LINE 1 / LINE 2: Connect to external audio source at rear jacks. The unit offers 2 sets. Each set works independently. Connect Line 1 Jack at rear and press LINE 1 button at front to activate LINE1 source. Connect Line 2 Jack at rear and press LINE 2 button at front to activate LINE2 source. Microphone work normally when the unit is under playing model.

MIC INPUT (Front) : Microphone IN. Microphone work normally when the unit is under playing model.

MIC VOLUME (Front) : Adjust microphone volume for front Microphone IN. Microphone work normally when the unit is under playing model

MIC 1/ MIC 2 (Rear) : INPUT – Microphone IN.

(Rear) : VOLUME - Adjust microphone volume for rear Microphone IN.

Voice Priority : Press to automatically lowering music volume when speaking into the microphone

<<PLAY / II>> : Press to start and pause playing.

<<STOP/ EJECT>>: to stops playing and eject disk.

Press to stop; LCD display shows all the number of tracks.

Press again to eject the disk; LCD display shows "EJECT"

Press again, the disk will be automatically inserted.

<<CD / USB / SD / RADIO>>: Press the button to select the function of CD, USB, SD Card, or RADIO mode.

<<RAN / ENTER>>: Play in a random order and confirmation bottom.

Press to play all songs in a random order. The LCD display shows "RANDOM"

Press again, LCD display shows "Enter" to confirm the "PROG" function. (pls see "PROG" section for operating program function.)

REPEAT : Repeat play

To play the ordinary format of music :

1. Press once to repeat current track. The LCD displays shows "REPEAT 1" :
2. Press again to repeat whole CD. The LCD display shows "REPEAT ALL"
3. Then press again to cancel repeat function

To play MP3 format of CD, USB, or SD Card :

1. Press to repeat current track. LCD display shows "Repeat"
2. Press again to repeat current folder. LCD display shows "REPEAT FOLDER"
3. Then press again to repeat whole songs in the file. LCD display shows "REPEAT ALL"
4. Press again to cancel repeating function.

FOLDER  : Forward to next folder.

FOLDER  : Backward to last folder.

REV  :

Press to backward to previous track.

Press for 5 seconds to fast backward the playing.

F.WD  :

Press to fast forward to next track.



Press for 5 seconds to fast forwarding the playing.

<<MUTE>>: for temporarily muting the sound.

<<PROG>>: To memorize the songs are selected. Up to 10 songs can be stored.

Press <<PROG>>, LCD display shows "PROGRAM". Select desired song by using

<<SKIP>> button, then press <<RAN / ENTER>> button store 1st song, LCD display shows "00 01" for the 1st song. Press <<RAN / ENTER>> again for storing 2nd song; LCD display shows "00 02". Start over above process for storing up to 10 songs.

Press PLAY / II to start play programmed songs. Press REV  or F.WD  button to select programmed songs.

Press PROG. Again to cancel program function.

RADIO OPERATION:

Press <<CD / USB / SD / RADIO>> button to select Radio mode.

BAND : Switching for FM or AM

TUN / TUN : Press “ ” or “ ” for searching station. Press for over 3 seconds enters into automatic scan searching. Scanning stops when unit receiving station.

<<M1 ~ M5/M+5 >>buttons: memorizing radio stations. Up to 10 stations can be stored,

Press TUN / TUN button to start scan the station. Press <<M1~M5>> buttons for 3 seconds to store 1st ~ 5th stations. For store 6th ~10th stations, press<< M+5>> button; LCD shows “M+5”, then press <<M1~M5>> button for 3 seconds until LCD display shows “CH”. For example, for store 8th station, press <<M+5 then M3 for 3 seconds>> until LCD display shows CH8.

If you wish to resume play M1~M5 stations, press <<M+5>> button again. “M+5” disappears on LCD then press <<M1~M5>> button.

To play the stored station, directly press <<M1~M5>> button or <<M+5>> button then press <<M1~M5>> button under RADIO mode.

USB device

Insert USB in the faceplate.

Press CD / USB / SD / RADIO button on the remote controller front panel to select USB mode.

USB function will activate when “USB” appears on the LCD display.

Note:

Please note that do not intend to insert the 8 cm disc or computer CD

When inserts the disk into CD player or takes out the disk, it is required to let CD automatically operation. It is prohibited to push or take out the disk by hand before the disk completely in/out from device, otherwise it will damage the unit.

REMOTE CONTROL UNIT



CD / USB / SD READER OPERATION:



 : Press to eject or insert the disk.

CD / USB / SD / RADIO: Press to select CD, USB, SD Card, or RADIO mode. The unit plays automatically.


 : PLAY / PAUSE. Press to play or pause.

 : Stop to play.

 : Press to fast forward. Press again to cancel. Then Press  , back to normal play.

 : Press once to activate fast reverse. Presses again to cancel fast backward. Then Press  , back to normal play.

 : Forward to next track.

 : Backward to the previous track.

 : Repeat play function.

To play the ordinary format of music :

1. Press once to repeat current track. The LCD displays shows "REPEAT 1" :
2. Press again to repeat whole CD. The LCD display shows "REPEAT ALL"
3. Then press again to cancel.repeating function

To play MP3 format of CD, USB, or SD Card :

1. Press to repeat current track. LCD display shows "Repeat"
2. Press again to repeat current folder. LCD display shows "Repeat folder"
3. Then press again to repeat whole songs in the file. LCD display shows "Repeat ALL"
4. Press again to cancel repeating function.

RAN

: Press to play all songs in a random order. LCD display shows "RANDOM".

FOLDER

: Press to forward to next folder; LCD display shows folder number



: ON / OFF Mute. For temporarily muting the sound.





: Press to confirm the execution of operation.

Numeral 0 ~ 9 : Press to select desired track.

PROG

: To memorize the songs are selected. Up to 10 songs can be stored.

Press "PROG", LCD display shows "PROGRAM". Select desired song by using SKIP button, then press RAN / ENTER button to store 1st song, LCD display shows "00 01" for the 1st song. Press RAN / ENTER again for storing 2nd song; LCD display shows "00 02". Start over above process for storing up to 10 songs.

Press PLAY / II to start play programmed songs. Press REV  or F.WD  button to select programmed songs.

Press "PROG" again to cancel program function.

RADIO OPERATION:

CD / USB / SD / RADIO: press to select radio mode.

BAND : Switching for FM or AM

TUN TUN : P f s"s "for searching station

AUTO SCAN - +: automatic scan searching. Scanning stops when unit receiving station.


MEMORY : Up to 10 stations can be stored,

Press TUN TUN button to start scan the station. Press M1~M10 buttons to store 10 stations.

M1 ~ M10: Press to play memorized channels directly.

Remote controller shall appoint to the receiving hole of faceplate. The optimal receiving distance is 3 meters. The available distance is 5 meters.

Battery installation of the remote controller

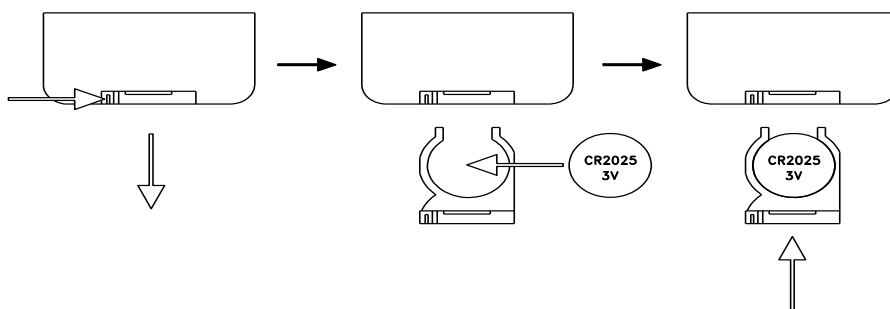

1. To open up the battery cover (on the back side of the remote controller), Press down the cap and slide it from the left to the right, then to pull it out.
2. Place a new battery (battery type: CR2025 3V, w/its positive upward).
3. Reverse the actions stated in the statement 1.



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

RS232 - COMMAND CODE

The communication between Computer and the machine uses UART.

The operating parameters of UART are as follows:

Start bit : 1

Data bits : 8

Stop bit : 1

Parity bit : none

CODE : HEX

Baud : 9600

| FUNCTION | HEX | | | | | | |
|-----------------|-----|----|----|----|----|----|----|
| EJECT | 45 | 31 | 00 | FF | 46 | 0D | 0A |
| PROG | 45 | 31 | 00 | FF | 0D | 0D | 0A |
| RANDOM | 45 | 31 | 00 | FF | 15 | 0D | 0A |
| REPEAT | 45 | 31 | 00 | FF | 08 | 0D | 0A |
| PLAY/PAUSE | 45 | 31 | 00 | FF | 4A | 0D | 0A |
| NEXT | 45 | 31 | 00 | FF | 03 | 0D | 0A |
| MUTE | 45 | 31 | 00 | FF | 02 | 0D | 0A |
| KEY3 | 45 | 31 | 00 | FF | 1F | 0D | 0A |
| KEY6 | 45 | 31 | 00 | FF | 11 | 0D | 0A |
| KEY9 | 45 | 31 | 00 | FF | 59 | 0D | 0A |
| STOP | 45 | 31 | 00 | FF | 48 | 0D | 0A |
| KEY2 | 45 | 31 | 00 | FF | 1D | 0D | 0A |
| KEY5 | 45 | 31 | 00 | FF | 1B | 0D | 0A |
| KEY8 | 45 | 31 | 00 | FF | 12 | 0D | 0A |
| KEY0 | 45 | 31 | 00 | FF | 55 | 0D | 0A |
| FWD. | 45 | 31 | 00 | FF | 06 | 0D | 0A |
| KEY1 | 45 | 31 | 00 | FF | 09 | 0D | 0A |
| KEY4 | 45 | 31 | 00 | FF | 19 | 0D | 0A |
| KEY7 | 45 | 31 | 00 | FF | 17 | 0D | 0A |
| FOLDER | 45 | 31 | 00 | FF | 50 | 0D | 0A |
| REV | 45 | 31 | 00 | FF | 5E | 0D | 0A |
| CD/USB/SD/RADIO | 45 | 31 | 00 | FF | 47 | 0D | 0A |
| PREV | 45 | 31 | 00 | FF | 05 | 0D | 0A |
| BAND | 45 | 31 | 00 | FF | 1E | 0D | 0A |
| TUNING DN | 45 | 31 | 00 | FF | 0E | 0D | 0A |
| TUNING UP | 45 | 31 | 00 | FF | 1A | 0D | 0A |
| ENTER | 45 | 31 | 00 | FF | 0F | 0D | 0A |
| AUTO SCAN UP | 45 | 31 | 00 | FF | 45 | 0D | 0A |
| AUTO SCAN DN | 45 | 31 | 00 | FF | 01 | 0D | 0A |
| MEMORY | 45 | 31 | 00 | FF | 52 | 0D | 0A |



WARNING:
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

EXPLICACION DE LOS SIMBOLOS GRAFICOS




Este símbolo, cuando se use, le alerta de la presencia de una tensión peligrosa y no aislada con el producto cerrado. Este voltaje puede ser suficiente para constituir un riesgo de descarga eléctrica.



Este símbolo, cuando se usa, le alerta de una instrucción de uso o mantenimiento importante. Por favor léala.


ATENCIÓN:

PARA REDUCIR EL RIESGO DE FUEGO O DESCARGA ELECTRICA, NO EXPONGA LA UNIDAD A LA LLUVIA O HUMEDAD, NO RETIRE LAS TAPAS. ESTE PRODUCTO NO ESTA DISEÑADO PARA USARSE DE OTRA MANERA QUE LA ESPECIFICADA


1. Lea las instrucciones - Todas las instrucciones de seguridad y manejo deben ser leídas antes de hacer funcionar la unidad.
2. Conserve las instrucciones - Estas instrucciones deben ser conservadas para futuras referencias.
3. Respete los avisos - Todos los avisos en la unidad y el manual deben ser tenidos en cuenta.
4. Siga las instrucciones . Todas las instrucciones deben ser seguidas.
5. Agua y humedad - La unidad no debe ser usada cerca de agua, por ejemplo bañeras, fregaderos, o lugares húmedos como piscinas.
- 6- Bandejas y carros - La unidad sólo debe ser usada con una bandeja o carro de transporte recomendado por el fabricante.
La unidad y el carro deben ser movidos con cuidado. 
Paradas bruscas, excesiva fuerza o superficies poco firmes pueden causar la caída de la unidad.
7. Polarización y toma de tierra - Deben tomarse precauciones para la correcta polarización y toma a tierra de la unidad.
8. Ventilación - La unidad debe estar situada en una posición que no interfiera con la adecuada ventilación. Por ejemplo, la unidad no debe ser situada sobre una cama, sofá o superficie similar que pueda bloquear las salidas de ventilación o en un recinto como muebles o estanterías que impidan el flujo de aire.
9. Calor - La unidad debe ser situada apartada de fuentes de calor como radiadores, estufas u otras aplicaciones que generen calor.
10. Fuentes de alimentación - La unidad deben ser conectada a una fuente de alimentación del tipo descrito en el manual y marcado en la unidad.
- 11- Protección del cable de alimentación - Este cable no debe ser colocado de tal manera que pueda ser pisado o pinzado por personas u objetos dem alrededor, prestando especial atención al cable y conectores y en el punto donde abandona la unidad.
12. Limpieza - La unidad debe ser limpiada sólo como recomienda el fabricante.
13. Periodo sin usar - El cable debe ser desconectado de la red cuando no vaya usarse durante un largo periodo de tiempo.
14. Entrada de objetos o líquido - Debe tener cuidado ante la caída de objetos o líquidos dentro del la unidad.
15. Daños que requieren servicio - La unidad debe ser comprobada por técnicos especializados cuando:
 - A. El cable de alimentación o conector hayan sido dañados, o
 - B. Han caído objetos o líquidos dentro de la unidad, o
 - C. La unidad ha sido expuesta a la lluvia, o
 - D. La unidad no parezca funcionar con normalidad o exhiba un marcado cambio de rendimiento.
 - E. La unidad haya caído o se ha dañado la carcasa.
16. Comprobaciones - El usuario no debe tratar de hacer funcionar la unidad más allá de lo descrito en este manual. Todas las demás comprobaciones deben ser llevadas a cabo por técnicos especializados.

Vista general

Panel Frontal:

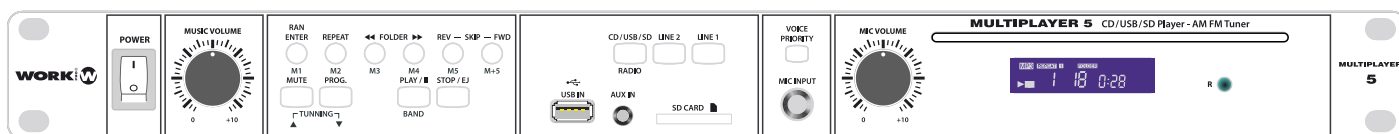

Panel Trasero:

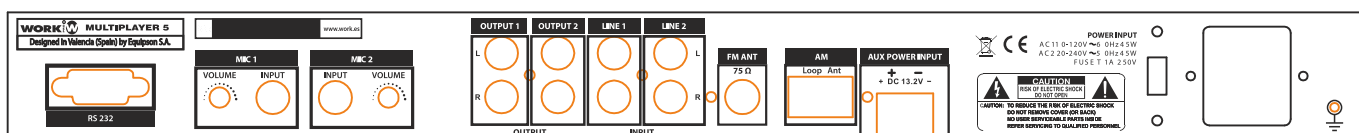

ACCESORIOS:

| | | | |
|---------------------------|-----|-----------------------|----|
| Antena AM | x 1 | Cable antena FM | x1 |
| Cable audio RCA-RCA (L-R) | x1 | Cable alimentación AC | |
| Mando Remoto | x 1 | | |

INSTALACION:

1. Conecte el cable RCA-RCA a los terminales OUTPUT
2. Conecte el cable de alimentación AC entre su clavija y una toma adecuada AC (115/230V) de acuerdo al voltaje local.
Recuerde verificar la correcta posición del selector de tensión del panel trasero.



O conecte un cable DC entre los terminales DC 13.2V y un alimentador externo del valor adecuado

3. Conecte la toma RS 232 de la parte trasera

4. Conecte la toma de tierra



CD Anti Shock CD / Lector USB - SD / Sintonizador AM - FM

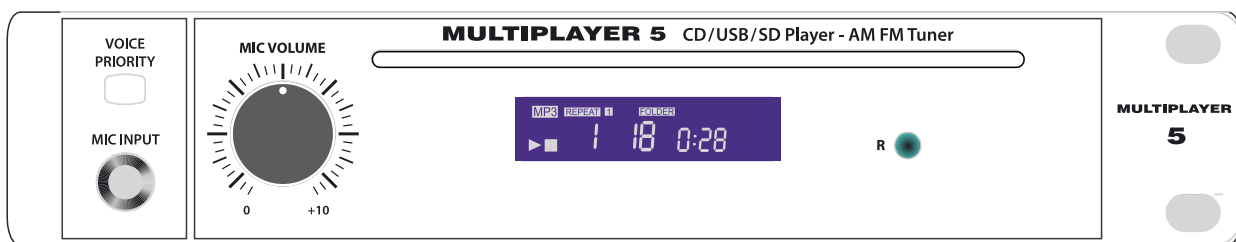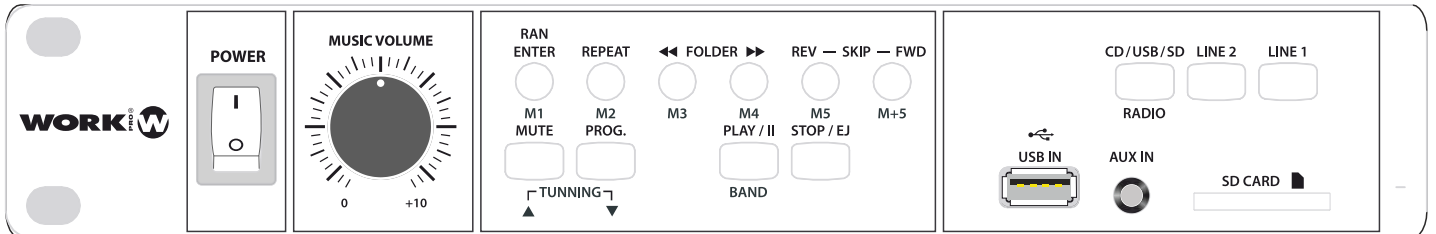

Características

- Proporciona funciones de CD, lector USB/SD y sintonizador AM / FM
- Compatible con USB de hasta 16G USB, y tarjetas SD / SDHC
- Acepta discos de 12 cm así como CD, CD-R, CD-RW, y discos MP3
- Playing format: MP3, WMA

Instrucciones para el funcionamiento del CD/USB / SD

- POWER** : Para encender/apagar el dispositivo.
- VOLUME** : Para ajustar el volumen.
- AUX IN** : Conector jack 3.5mm estéreo para conectar un reproductor MP3 externo
- LED ON/OFF** : LED que muestra el encendido/apagado de la unidad
- LINE1/LINE2** : Conecte un dispositivo de audio externo en sus tomas traseras. La unidad dispone de dos entradas diferentes. cada una funciona independientemente. Conecte una fuente en LINE 1 o LINE 2 y presione el botón frontal correspondiente para activar la fuente.
- MIC INPUT (Fr)** : Entrada de micrófono. El micrófono actúa normalmente cuando la unidad está en modo play.
- MIC VOLUME (Fr)** : Ajusta el volumen del micrófono conectado en MIC INPUT.
- MIC 1/ MIC 2 (Tras):** Entradas de micrófono trasera
- VOLUME MIC (Tras):** Control de volumen de las tomas de micrófono traseras

Voice Priority : Presione para reducir el volumen de la música cuando se está utilizando el micrófono

<<PLAY / II>> : Presione para iniciar o interrumpir la reproducción

<<STOP/ EJECT>> : Detener la reproducción y expulsar el disco

Presione para detener, la pantalla LCD muestra todos los número de pistas

Presione otra vez para expulsar el disco, la pantalla LCD muestra "EJECT"

Presione otra vez, el disco se inserta automáticamente.

<<CD / USB / SD / TUNER>>: Presione para seleccionar la función del modo CD, USB, SD o RADIO

<<RAN/ENTER: Reproduce las pistas en modo aleatorio

Presione para ejecutar todas las pistas en orden aleatorio. La pantalla LCD muestra "RANDOM"

Presione de nuevo, la pantalla muestra ENTER para confirmar la función PROG (Consulte la sección PROG para aprender su funcionamiento)


<<REPEAT : Reproducción en modo repetición.

Para reproducir el formato ordinario de música

1. Presione una vez para repetir la pista actual. La pantalla muestra "REPEAT 1":
2. Presione de nuevo para repetir el CD entero. La pantalla muestra "REPEAT ALL"
3. Presione de nuevo para cancelar

Reproducir ficheros MP3 de un CD, USB SD:

1. Presione para rpetir la pista actual. La pantalla LCD muestra "Repeat"
2. Presione otra vez para repetir la carpeta actual. La pantalla LCD muestra "REPEAT FOLDER"
3. Presione otra vez para repetir todas las pistas . La pantalla LCD muestra REPEAT ALL"
4. Presione de nuevo para cancelar la función de repetición.

FOLDER  a la carpeta siguiente

FOLDER  a la carpeeta anterior

REV 

Presione para volver a la pista anterior

Presione durante 5 segundos para buscar hacia atrás rápidamente

FWD 

Presione para ir a la pista siguiente



Presione durante 5 segundos para buscar hacia adelante rápidamente

<<MUTE>>: "Mutea" temporalmente el sonido

<<PROG>> :Para memorizar las pistas seleccionadas. Hasta 10 pistas pueden ser guardadas

Presione <<PROG>>, la pantalla muestra "PROGRAM". Selecciona la pista deseada usando

<<SKIP>> , entonces presione << ENTER>> para guarda la 1ª pista, la pantalla muestra "00 01" para la 1ª pista. Presione <<ENTER>> otra vez para uarda la 2ª pista. La pantalla LCD muestra "00 02". Siga este proceso para guardar hasta 10 pistas.

Presione PLAY / II para comenzar a reproducir las pistas memorizadas. Presione REV  o FWD  para seleccionar las pistas programadas.

Presione PROG de nuevo para cancelar la función de programación.

FUNCIONAMIENTO DEL SINTONIZADOR:

Presione <<CD / USB / SD / RADIO>> para seleccionar el modo sintonizador (Tuner)

BAND : Conmuta entre FM o AM

TUN / TUN : Presione para buscar la emisora. Presione más de 3 segundos para entrar en la búsqueda automática. El escaneo se detiene cuando la unidad encuentra una emisora.

<<M1 ~ M5/M+5 >>: memorización de las emisoras. Hasta 10 emisoras pueden ser almacenadas:

Presione TUN para comenzar el escaneo de emisoras. Presione <<M1-M5>> durante 3 segundos para almacenar las emisoras de la 1ª a la 5ª. para almacenar de la 6ª a la 10ª, presione la tecla <<M+5>>, la pantalla mostrará "M+5", entonces presione la tecla <<M1-M5>> durante 3 segundos hasta que la pantalla muestre "CH". Por ejemplo, para almacenar la octava emisora, presione <<M+5 y luego M3 durante 3 segundos>> hasta que la pantalla muestra CH8.

Si desea volver a las emisoras 1ª a 5ª, presione la tecla <<M+5>> de nuevo, "M+5" desaparecerá de la pantalla, entonces pulse la tecla <<M1-M5>>.

Para reproducir una emisora almacenada, presione directamente la tecla <<M1-M5>> para las 5 primeras o <<M+5>> y <<M1-M5>> para las emisoras de la 6ª a la 10ª.

Nota :

Por favor, no inserte CD de 8cm ni CD de ordenador.

Cuando inserte el disco o lo extraiga, deje que la unidad concluya el proceso automáticamente. No pulse teclas o extraiga el disco antes de que la unidad concluya el proceso, podría dañar la unidad.

Dispositivo USB

Inserte el USB en la toma del panel frontal

Presione la tecla CD / USB / SD / RADIO en el panel frontal o el mando remoto para seleccionar el modo USB. La función USB se activará mientras aparezca "USB" en la pantalla

UNIDAD DE CONTROL REMOTO



FUNCIONAMIENTO CD / USB / SD :

Presione para expulsar o insertar el disco

CD / USB / SD / RADIO : Presione para seleccionar el modo CD, USB, SD Card, o RADIO. La unidad lo reproduce automáticamente.

: PLAY / PAUSE. Presione para reproducir o pausar

: Detiene la reproducción

: Avance rápido. Presione otra vez para cancelar. Presione modo normal

: Presione una vez para activar el retroceso rápido. Presione otra vez para cancelar. Entonces Presione para volver al modo normal.

: Avanza a la siguiente pista

: Retrocede a la pista anterior.

0 ~9 : Presione para seleccionar la pista deseada

REP : Función de repetición


para reproducir un formato ordinario de música :


1. Presione una vez para repetir la pista actual. La pantalla LCD muestra "REPEAT 1".
2. Presione de nuevo para repetir todo el CD. La pantalla LCD muestra "REPEAT ALL"
3. Presione de nuevo para cancelar la función de repetición.


Reproducir formatos MP3 en CD, USB, o SD Card :


1. Presione para repetir la pista actual. La pantalla LCD muestra "Repeat"
2. Presione de nuevo para repetir la carpeta completa, la pantalla LCD muestra "Repeat folder"




3. Presione de nuevo para repetir todas las pistas. La pantalla LCD muestra "Repeat all"
4. Presione de nuevo para cancelar la reproducción de repetición.

 : Presione para ejecutar todas las pistas aleatoriamente. La pantalla LCD muestra "RANDOM".

 : Presione para ir a la carpeta siguiente, la carpeta muestra el número de carpeta

 : ON / OFF Mute. "Mutea" temporalmente el sonido.

 : Presione para confirma la ejecución de la operación

 : Para memorizar las pistas seleccionadas. Hasta 10 pistas pueden ser guardadas. Presione "PROG", la pantalla LCD muestra "PROGRAM". Seleccione la pista usando SKIP entonces presione ENTER para guardar la 1ª pista, la pantalla muestra "00 01" para la 1ª pista. Presione ENTER de nuevo para guardar la 2ª pista, la pantalla muestra "00 02". Repita el proceso para guardar 10 pistas.. Presione PLAY / II para comenzar a reproducir las pistas programadas. Presione REV  FWD  para seleccionar la pista programada. Presione "PROG" de nuevo para cancelar la función de programación.

FUNCIONAMIENTO SINTONIZADOR :

CD / USB / SD / TUNER : presione para seleccionar el modo sintonizador (tuner)

BAND : Conmuta entre FM o AM

TUN / TUN : Presione " " para buscar emisoras


AUTO SCAN - + : Búsqueda automática. El escaneo se detiene al localizar una emisora.

MEMORY : Up to 10 stations can be stored,

Presione TUN / TUN para comenzar a escanear emisoras. Presione M1~M10 para guardar las emisoras M1 ~ M10.

El mando remoto debe apuntarse al sensor situado en el panel frontal. La distancia óptima es de 3 metros. La distancia máxima es de 5 metros.

Instalación de la pila en el mando remoto

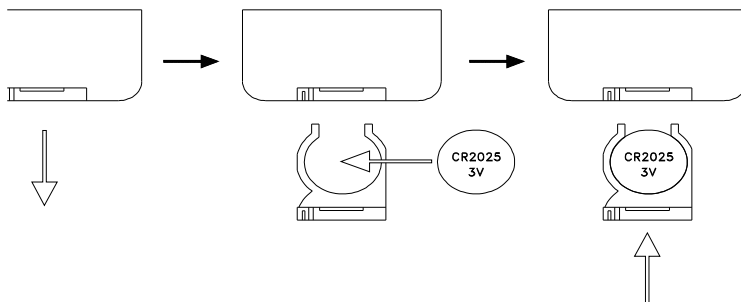

1. Abrir la cubierta de la pila (en la parte trasera del mando), presione hacia abajo y deslícela de izquierda derecha, entonces extraícala.
2. Coloque una nueva pila (tipo CR2025 3V con el positivo hacia arriba)
3. Realice el punto 1 a la inversa.



Este símbolo en su equipo o embalaje, indica que el presente producto no puede ser tratado como residuos domésticos normales, sino que deben entregarse en el correspondiente punto de recogida de equipos electrónicos y eléctricos. Asegurándose de que este producto es desechado correctamente, Ud. está ayudando a prevenir las consecuencias negativas para el medio ambiente y la salud humana que podrían derivarse de la incorrecta manipulación de este producto. EL reciclaje de materiales ayuda a conservar las reservas naturales. Para recibir más información, sobre el reciclaje de este producto, contacte con su ayuntamiento, su punto de recogida más cercano o el distribuidor donde adquirió el producto.



EQUIPSON, S.A.

Avda. El Saler, 14 - Pol. Ind. L'Alteró, 46460 - Silla (Valencia) Spain

Tel. +34 96 121 63 01 Fax + 34 96 120 02 42

www.work.es support@work.es