



## Parts index

\*not to scale

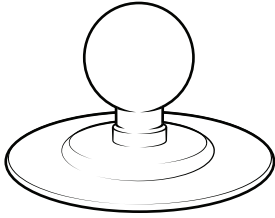

x 1

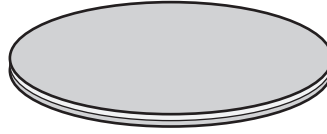





x 1



x 1

\* Clean surface with alcohol prep pad and let dry prior to applying adhesive

**\* Allow at least 24 hours for adhesive to fully bond to surface before mounting your device**

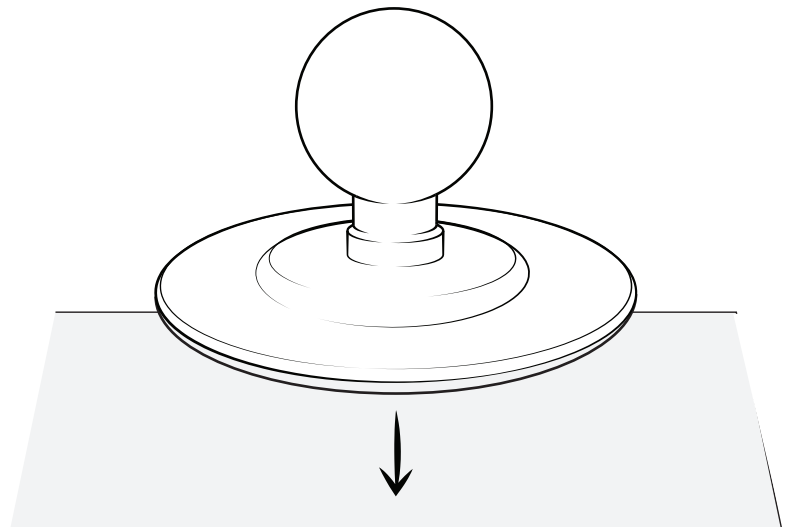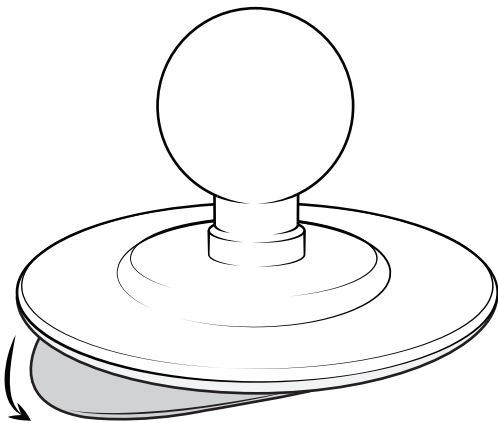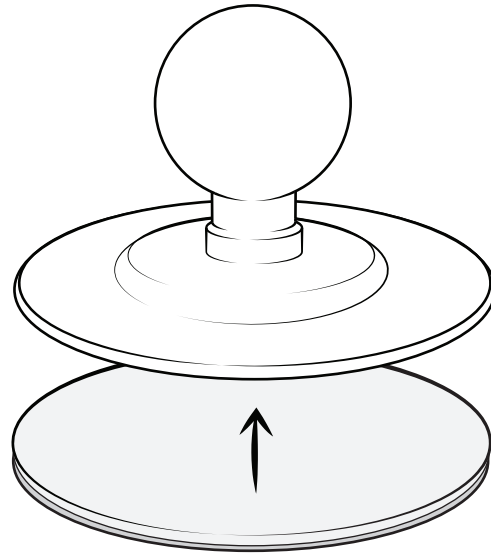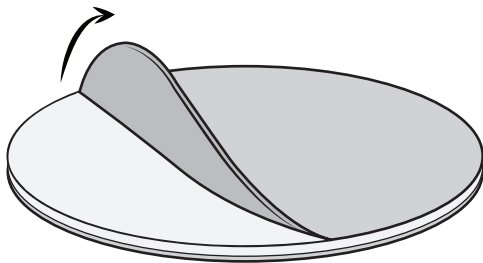

RPR-INS-B-378



### Safety Precaution

Do not install this product near or over an airbag deployment area or in a location that obstructs the driver's vision or interferes with vehicle operation. National Products, Inc does not assume responsibility or liability for any such personal injury, death or property damage.