

ZIGBEE HEATING REGULATOR H10

REFERENCE MANUAL



1. OVERVIEW

Thank you for purchasing the ubisys dimmer D1, a universal ZigBee AC dimmer with integrated smart meter.

You have decided for a high-quality product with first-rate support!

This reference manual provides operating and maintenance instructions, interface specifications, command references and more. It is primarily intended for system integrators, not end-users.

An installation guide specific to your region is available as a separate document and is included in printed form in the product package.

If you have any questions or need additional support, please visit the support pages that best fit your background:

If you are a consumer (private household) or installer, please visit the Smart Home support pages at <http://www.ubisys.de/en/smarthome/support.html> for contact details.

As a commercial customer, please visit the Engineering support pages at <http://www.ubisys.de/en/engineering/support.html> for contact details.

Copyright© 2014-2018 ubisys technologies GmbH, Düsseldorf, Germany.
All rights reserved.

2. CONTENTS

1. Overview	2
2. Contents	3
3. Features	5
4. Installation	7
4.1. Professional installation	7
5. Initial Device Start-up	8
6. Man-Machine Interface (MMI)	9
6.1. Common ubisys zigbee MMI	9
6.2. Power-Cycle Sequencing Factory Reset	10
6.3. Specific MMI for H10 Manual Operation and Output Level Monitoring	10
7. ZigBee Interface	12
7.1. Application Endpoint #0 – ZigBee Device Object	16
7.2. Application Endpoint #1 – Thermostat	17
7.2.1. Basic Cluster (Server)	17
7.2.2. Identify Cluster (Server)	17
7.2.3. Groups Cluster (Server)	18
7.2.4. Scenes Cluster (Server)	18
7.2.5. Thermostat Cluster (Server)	19
7.2.6. Thermostat Cluster (Client)	21
7.2.7. Temperature Measurement Cluster (Client)	21
7.2.8. Relative Humidity Measurement Cluster (Client)	22
7.2.9. Occupancy Sensing Cluster (Client)	22
7.3. Application Endpoint #2 – Thermostat	23
7.4. Application Endpoint #3 – Thermostat	23
7.5. Application Endpoint #4 – Thermostat	23
7.6. Application Endpoint #5 – Thermostat	23
7.7. Application Endpoint #6 – Thermostat	23
7.8. Application Endpoint #7 – Thermostat	24
7.9. Application Endpoint #8 – Thermostat	24
7.10. Application Endpoint #9 – Thermostat	24
7.11. Application Endpoint #10 – Thermostat	24
7.12. Application Endpoint #11 – Heating/Cooling Unit	25

7.12.1.	Basic Cluster (Server)	25
7.12.2.	Identify Cluster (Server)	25
7.12.3.	Groups Cluster (Server)	26
7.12.4.	Scenes Cluster (Server)	26
7.12.5.	On/off Cluster (Server)	27
7.12.6.	Level Control Cluster (Server)	27
7.13.	Application Endpoint #12 – Heating/Cooling Unit	30
7.14.	Application Endpoint #13 – Heating/Cooling Unit	30
7.15.	Application Endpoint #14 – Heating/Cooling Unit	30
7.16.	Application Endpoint #15 – Heating/Cooling Unit	30
7.17.	Application Endpoint #16 – Heating/Cooling Unit	30
7.18.	Application Endpoint #17 – Heating/Cooling Unit	31
7.19.	Application Endpoint #18 – Heating/Cooling Unit	31
7.20.	Application Endpoint #19 – Heating/Cooling Unit	31
7.21.	Application Endpoint #20 – Heating/Cooling Unit	31
7.22.	Application Endpoint #232 – Device Management	32
7.22.1.	Basic Cluster (Server)	32
7.22.2.	Identify Cluster (Client)	33
7.22.3.	Commissioning Cluster (Server)	33
7.22.4.	Over-the-Air Upgrade Cluster (Client)	33
7.23.	Application Endpoint #242 – ZigBee Green Power	34
7.23.1.	Green Power Cluster (Server)	34
7.23.2.	Green Power Cluster (Client)	36
8.	Physical Dimensions	38
9.	Ordering Information	42
10.	General Terms & Conditions of Business	43
11.	Declaration of Conformity	44
12.	Revision History	45
13.	Contact	46

3. FEATURES

- Advanced zigbee thermal regulator for up to 10 individual heating and/or cooling zones
- Modular design – perfectly suited for adapting to customer's heating infrastructure and retrofitting:
 - o H10/230-B base module with zigbee interface for direct drive of up to 10 230V~ valves
 - o H10/24-B base module with zigbee interface for direct drive of up to 10 24V= valves
 - o H10-XP extension module for circulation pump control, 2 motor control outputs 230V~/500VA
 - o H10-XS extension module for heating and cooling demand, 2 SPDT outputs 230V/1,800VA
 - o H10-XW extension module for connecting a multitude of 1-Wire® temperature sensors
 - 10 forward flow temperatures, or a single global forward flow temperature
 - 10 return flow temperatures
 - 10 class A local (room) temperatures – e.g. wall-mount sensor
 - 10 class B local (room) temperatures – e.g. in-floor sensor
 - 1 outdoor temperature
 - o H10/230-XI extension module for connecting legacy 230V~ in-wall thermostats
 - o H10/24-XI extension module for connecting legacy 24V= in-wall thermostats
- Base module H10-B for direct drive of thermoelectric radiator valves:
 - o either 10 heating or cooling zones (one valve control output per zone, two-pipe system)
 - o or 5 heating and cooling zones (two valve control outputs per zone, four-pipe system)
 - o advanced PI control loop to determine heating demand and cooling demand
 - o available in two flavours: H10/230-B for 230V~/50Hz valves, H10/24-B for 24V valves
 - o H10/230-B incorporates universal power supply: 85V~...264V~, 47Hz...440Hz
 - o comprises a powerful zigbee 3.0 interface with routing functionality
 - o features a real-time clock with back-up battery for autonomous schedules
 - o works with temperature, occupancy or combined environmental sensors, both “classic” and energy-harvesting zigbee green power¹ sensors
- Can work in conjunction with other thermostats in a leader/follower setup
- Compatible with Legrand's in-wall thermostat UI Model No. 0 663 40
- Different operating modes:
 - o Under normal operating conditions thermostat set-points, occupancy information and temperature readings are used for closed-loop control of the temperature
 - o When sensor reports are missing the device enters back-up mode and applies default valve opening values with different pre-sets for summer and winter seasons
 - o Automatic temperature regulation of the built-in thermostat can be overruled by setting arbitrary steering values per valve output, e.g. 10%, 50% or 100% using zigbee level steering
 - o Pass-through mode allows legacy wired in-wall thermostats to control valve outputs, i.e. the valve behaves like it was directly wired to the legacy thermostat
 - o Manual mode allows valve control using a button (bypassing valve settings determined by either the zigbee thermostat, legacy thermostats, or zigbee level steering)
- Supports groups, scenes, bindings, and reporting
- Reliable, unattended, maintenance-free operation;
designed for DIN rail mounting in hot water/cold water underfloor heating distribution cabinets
- H10-230B, H10-24B and H10-XP employ solid state switching for highest efficiency and durability
- H10-230B and H10-24V employ staggered switching of valves to spread excessive valve turn-on currents over a time
- Made in Germany using high-quality, enduring parts for many years of life expectancy
- Low power dissipation: 0.3W
- On-board MCU: Advanced 32-bit ARM Cortex-M4 running at 48MHz with 128KB SRAM
- On-board PHY: Texas Instruments CC2520, 5dBm transmit power, -98dBm receiver sensitivity
- On-board inverted-F antenna
- Leverages ubisys IEEE 802.15.4 MAC and ZigBee stack for best-in-class reliability and performance

¹ H10-B is a Green Power Combined device with proxy and sink (including compact reporting feature)

- Supports all channels in the 2.4 GHz band, i.e. channels 11-26 as per IEEE 802.15.4:
Primary = { 11, 15, 20, 25 }; Secondary = { 12, 13, 14, 16, 17, 18, 19, 21, 22, 23, 24, 26 }
- Supports joining centralized and distributed security networks as router
- Supports forming simple centralized security networks as Coordinator and Trust Center
- Supports forming distributed security networks as router
- Three pre-configured Trust Center Link-Keys for joining:
 - o Global Default Trust Center Link-Key (“ZigBeeAlliance09”)
 - o ZigBee 3.0 Global Distributed Security Link-Key²
 - o Device-individual link-key derived from installation code – also printed as text and QR barcode
- Extended neighbour table with up to 78 entries for routers and end-devices -
more than three times the capacity required by the standard (25)
- Extended routing table with up to 96 entries for ad hoc and many-to-one routes -
nearly ten times the capacity required by the standard (10)
- Extended buffering for sleeping end-devices with up to 24 buffers -
24 times the capacity required by the standard (1)
- Extended APS duplicate rejection table with up to 64 slots -
64 times the capacity required by the standard (1)
- Extensive transmit and receive queues for optimum through-put and minimum packet drop rate
- Reliable and scalable network-wide broadcasts featuring passive acknowledgments
- Reliable packet forwarding with automatic network-level retries
- Very sophisticated routing algorithm for reliable ad hoc routing – avoids routing loops even in case of
concurrent route requests with overlapping source/destination
- Firmware upgradable over-the-air during normal operation using ZigBee OTA Upgrade Cluster
- Man-Machine-Interface
 - o network steering, factory reset etc. using common ubisys 1-button + 1-LED interface
 - o separate push-button, 1 red/green and 10 channel LEDs for manual operation and monitoring
- Flame retardant housing (V-0); black, RAL 9005

² Currently, pre-certification key (D0...:DF)

4.1. Professional installation

Please refer to the hardware installation guide, which was included in the product package. It provides detailed installation instructions. Utilizing the services of a professional installer/electrician is imperative to avoid health hazards and damages to your heating/cooling infrastructure.

5. INITIAL DEVICE START-UP

The device will search for an open ZigBee network to join when you first apply power to it.

Open the ZigBee network for joining and then power-up the device.

H10 will blink quickly to indicate a search in progress. Once a search cycle is complete it will either blink five times slowly to indicate it has joined a network, or blink three times quickly to indicate a joining failure – for example no network found, not permitted onto the network, etc. It will continue to search for a network in case of failure.

Subsequently, when the device is power-cycled, it will blink five times slowly to indicate it is operating as a router on the network, ten times slowly to indicate that it is operating as a coordinator and trust center or blink quickly to indicate it is searching for a network to join. When commissioned, the router's LED will remain off after the five/ten blink cycles during normal operation. Afterwards, it will turn on only for as long as it is permitting other devices to join the network.

After reboot, if the device is properly commissioned, it resumes operation doing a "silent rejoin", i.e. it does not broadcast a device announcement in this case. After joining a network, the device will prolong the joining window by three minutes via a fresh ZDO permit joining request.

Notice: When the device is power-cycled, its thermostat endpoints are likely to not know enough about the heating/cooling zone conditions to immediately resume where they left off before the power-down. Give the device a few moments until sensor reports arrive, H10 has gathered enough insight into heating/cooling space conditions, and the control loop kicks in. Until then, the device will operate in back-up mode.

6.1. Common ubisys zigbee MMI

H10 offers a push-button behind a tiny hole in the front-face of the device, as well as a LED right next to it, i.e. the common MMI shared by most ubisys zigbee products. This man-machine interface provides access to a menu. In addition, it provides a handy shortcut to factory reset the device³.

To factory reset the device, keep the button pressed for approximately 10 seconds until the LED starts to flash. This is equivalent to selecting menu item #5.

Notice that the device also supports a power-cycle sequencing factory reset as detailed in section 6.2.

To enter the menu, press and hold the push-button for more than a second until you see three short flashes followed by a sequence of one blink, pause, one blink, pause, etc. This indicates that you have successfully entered the menu. With each short button press (less than a second), you advance through the menu. For example, pressing the button once brings you to the second menu item, which H10 indicates by two blinks, pause, two blinks pause, etc. Once you have reached the menu item that you want to run, press and hold the button for more than a second to execute the selected item. The exact meaning of each menu item depends on the particular device and may vary from firmware version to firmware version.

This is the menu for the Heating Regulator H10:

Menu Item #	Operation
1	<p>ZigBee Commissioning: Network Steering</p> <p>While in this mode a single press on the button instigates ZigBee Network Steering (“EZ-mode”). If the device is on a network it will open the network for new devices for three minutes, otherwise it will attempt to join an open network. If the network is already open, the device will close the network instead such that repetitive presses toggle the network permit joining state. The LED is on, when the network is open for new devices, and off otherwise.</p>
2	<p>ZigBee Commissioning: Finding & Binding</p> <p>Instigates the ZigBee Finding & Binding procedure (“EZ-mode”) on an initiator or target endpoint. Target endpoints will enter identify mode for three minutes. Initiator endpoints will query targets and create suitable bindings to these targets. After leaving the menu in this mode, the first button press starts the selection of the endpoint and each subsequent press (within half a second) increments the endpoint number. Once the desired endpoint is reached, wait for the LED to blink the selected number of times. Then, press a single time to accept the selection or wait for three seconds to cancel the command. The LED will blink one time to confirm an affirmative choice, or two times to indicate the request has been cancelled.</p>
3	<p>ZigBee Commissioning: Clear Bindings</p> <p>Clears bindings on an initiator endpoint. Select this menu item and leave menu mode. Afterwards the device expects the selection of an initiator endpoint. The first button press starts the selection of the endpoint and each subsequent press (within half a second) increments the endpoint number. Once the desired endpoint is reached, wait for the LED to blink the selected number of times. Then, press a single time to accept the selection or wait for three seconds to cancel the command. The LED will blink one time to confirm an affirmative choice, or two times to indicate the request has been cancelled. This mode is active for one round only. Afterwards the device reverts to mode #1.</p>
4	<p>ZigBee Commissioning: Set Device Role and Factory Reset</p> <p>Selects the ZigBee device role for this device on the network, resets the remaining settings to factory defaults and restarts the device. Select this menu item and leave menu mode. Afterwards the device expects the selection of an option. The first button press starts the selection of the option and each</p>

³ The 10-second-press factory reset (equivalent to menu item #5) is available since firmware version 1.06.

	subsequent press (within half a second) increments the option number. Once the desired option is reached, wait for the LED to blink the selected number of times. Then, press a single time to accept the selection or wait for three seconds to cancel the command. The LED will blink one time to confirm an affirmative choice, or two times to indicate the request has been cancelled. The following options are available: Option #1: Join an existing ZigBee network as router Option #2: Form a new distributed security network as the first router Option #3: Form a new centralized security network as the coordinator and trust center
5	Factory Reset Put the device into the same state as it was when it left the factory, then reboot. The only exception is the outgoing network security frame counter, which is preserved across factory resets. The device will broadcast a network leave indication.
6	ZigBee Commissioning: Advanced Commands Provides a number of advanced ZigBee commissioning command options. Select this menu item and leave menu mode. Afterwards the device expects the selection of an option. The first button press starts the selection of the option and each subsequent press (within half a second) increments the option number. Once the desired option is reached, wait for the LED to blink the selected number of times. Then, press a single time to accept the selection or wait for three seconds to cancel the command. The LED will blink one time to confirm an affirmative choice, or two times to indicate the request has been cancelled. The following options are available: Option #1: Perform a simple reset (reboot), then continue operating seamlessly (silent re-join) Option #2: Perform a simple reset (reboot), then re-join the network Option #3: Perform a full factory reset, including security frame counters and preserved settings
7	Reserved for internal use. Do not leave the menu in this mode.

6.2. Power-Cycle Sequencing Factory Reset

It is possible to instigate a factory reset using a special power-cycle sequence. This is equivalent to selecting menu item #5, with the advantage that you need no access to the device itself (only to its power supply).

1. Power the device for at least four seconds.
2. Interrupt the power supply for at least a second.
3. Reapply power for less than two seconds but more than half a second.
Notice that at the end of this cycle, the device is off and should remain off for at least a second.
4. Repeat the previous step two more times, for a total of three short power cycles.
5. Apply power to the device and leave it powered on.

The device will now factory reset and reboot.

This is the default reset sequence, equivalent to selecting menu item #5 as described above, or keeping the menu button pressed for more than 10 seconds, or removing the device from the network using a leave request.

6.3. Specific MMI for H10 Manual Operation and Output Level Monitoring

One operating button allows manual operation of the device without network connectivity. This can be useful during shell construction of a building when the zigbee network is not set-up yet, or during other network down-times due to device failures, maintenance, relevant devices running out of batteries etc.

A dedicated LED shows overall system status by turning green or red and ten green LEDs for each

valve output are used to show current valve opening levels.

7. ZIGBEE INTERFACE

Please refer to the following IEEE and ZigBee Alliance documents, which apply to this product:

- [R1] IEEE Standard 802 – Part 15.4: Low-Rate Wireless Personal Area Networks (LR-WPANs)
- [R2] ZigBee Specification, Revision 21, Document No. 05-3474-21
- [R3] ZigBee 2015 Layer PICS and Stack Profiles, Revision 6, Document No. 08-0006-06
- [R4] ZigBee Cluster Library Specification, Revision 5, Document No. 07-5123-05
- [R5] ZigBee Base Device Behavior Specification, Revision 13, Document No. 13-0402-13
- [R6] ZigBee PRO Green Power Feature Specification, Revision 26, Document No. 09-5499-26
- [R7] ZigBee Home Automation Public Application Profile 1.2, Revision 29, Document No. 05-3520-29
- [R8] ZigBee Smart Energy Standard 1.1b, Revision 18, Document No. 07-5356-18

Device Anatomy

The heating regulator base module H10-B provides ten individual PWM outputs for a rated voltage of 230V~/50Hz and an apparent power of up to 10VA per channel (model H10/230-B) or 24V= and a power of 5W per channel (model H10/24-B), which allows utilizing it for typical use cases in EMEA countries, in particular hot-water underfloor heating in Northern Europe. It combines state-of-the-art solid-state technology with advanced firmware for a unique feature set. Being a mains-powered device, H10-B also acts as a zigbee router improving network connectivity and meshing capabilities as well as serving as a connection point (“parent”) for sleeping end-devices and green power devices (“proxy”).

H10 provides 23 zigbee application endpoints:

Endpoint #	Profile	Application
0 (0x00)	0x0000: ZigBee Device Profile	ZigBee Device Object (ZDO) – standard management features
1 (0x01)	0x0104: Common Profile (HA)	Thermostat (0x0301). This endpoint provides temperature regulation and controls valve output #1 (and output #10 when configured for a four-pipe system). It supports groups and scenes. The identify cluster allows for push-button commissioning as a target. In addition, thermostat client allows following another thermostat, temperature sensor client allows it to be bound to a local temperature sensor and occupancy allows it to be bound to an occupancy sensor.
2 (0x02)	0x0104: Common Profile (HA)	Thermostat (0x0301). This endpoint provides temperature regulation and controls valve output #2 (and output #9 when configured for a four-pipe system). It supports groups and scenes. The identify cluster allows for push-button commissioning as a target. In addition, thermostat client allows following another thermostat, temperature sensor client allows it to be bound to a local temperature sensor and occupancy allows it to be bound to an occupancy sensor.
3 (0x03)	0x0104: Common Profile (HA)	Thermostat (0x0301). This endpoint provides temperature regulation and controls valve output #3 (and output #8 when configured for a four-pipe system). It supports groups and scenes. The identify cluster allows for push-button commissioning as a target. In addition, thermostat client allows following another thermostat, temperature sensor client allows it to be bound to a local temperature sensor and occupancy allows it to be bound to an occupancy sensor.

4 (0x04)	0x0104: Common Profile (HA)	Thermostat (0x0301). This endpoint provides temperature regulation and controls valve output #4 (and output #7 when configured for a four-pipe system). It supports groups and scenes. The identify cluster allows for push-button commissioning as a target. In addition, thermostat client allows following another thermostat, temperature sensor client allows it to be bound to a local temperature sensor and occupancy allows it to be bound to an occupancy sensor.
5 (0x05)	0x0104: Common Profile (HA)	Thermostat (0x0301). This endpoint provides temperature regulation and controls valve output #5 (and output #6 when configured for a four-pipe system). It supports groups and scenes. The identify cluster allows for push-button commissioning as a target. In addition, thermostat client allows following another thermostat, temperature sensor client allows it to be bound to a local temperature sensor and occupancy allows it to be bound to an occupancy sensor.
6 (0x06)	0x0104: Common Profile (HA)	Thermostat (0x0301). This endpoint provides temperature regulation and controls valve output #6 (unless the thermostat on endpoint 5 is configured for a four-pipe system). It supports groups and scenes. The identify cluster allows for push-button commissioning as a target. In addition, thermostat client allows following another thermostat, temperature sensor client allows it to be bound to a local temperature sensor and occupancy allows it to be bound to an occupancy sensor.
7 (0x07)	0x0104: Common Profile (HA)	Thermostat (0x0301). This endpoint provides temperature regulation and controls valve output #7 (unless the thermostat on endpoint 4 is configured for a four-pipe system). It supports groups and scenes. The identify cluster allows for push-button commissioning as a target. In addition, thermostat client allows following another thermostat, temperature sensor client allows it to be bound to a local temperature sensor and occupancy allows it to be bound to an occupancy sensor.
8 (0x08)	0x0104: Common Profile (HA)	Thermostat (0x0301). This endpoint provides temperature regulation and controls valve output #8 (unless the thermostat on endpoint 3 is configured for a four-pipe system). It supports groups and scenes. The identify cluster allows for push-button commissioning as a target. In addition, thermostat client allows following another thermostat, temperature sensor client allows it to be bound to a local temperature sensor and occupancy allows it to be bound to an occupancy sensor.
9 (0x09)	0x0104: Common Profile (HA)	Thermostat (0x0301). This endpoint provides temperature regulation and controls valve output #9 (unless the thermostat on endpoint 2 is configured for a four-pipe system). It supports groups and scenes. The identify cluster allows for push-button commissioning as a target. In addition, thermostat client allows following another thermostat, temperature sensor client allows it to be bound to a local temperature sensor and occupancy allows it to be bound to an occupancy sensor.
10 (0x0A)	0x0104: Common Profile (HA)	Thermostat (0x0301). This endpoint provides temperature regulation and controls valve output #10 (unless the thermostat on endpoint 1 is configured for a four-pipe system). It supports groups and scenes. The identify cluster allows for push-button commissioning as a target. In addition, thermostat client allows following another thermostat, temperature sensor client allows it to be bound to a local temperature sensor and occupancy allows it to be bound to an occupancy sensor.
11 (0x0B)	0x0104: Common Profile (HA)	Heating/Cooling Unit (0x0300). This endpoint provides direct steering of valve output #1, bypassing any thermostat control. The on/off and level control cluster on this endpoint can be used to set a specific duty cycle. It supports groups and scenes. The identify cluster allows for push-button commissioning as a target.
12 (0x0C)	0x0104: Common Profile (HA)	Heating/Cooling Unit (0x0300). This endpoint provides direct steering of valve output #2, bypassing any thermostat control. The on/off and level control cluster on this endpoint can be used to set a specific duty cycle. It supports groups and scenes. The identify cluster allows for push-button commissioning as a target.

13 (0x0D)	0x0104: Common Profile (HA)	Heating/Cooling Unit (0x0300). This endpoint provides direct steering of valve output #3, bypassing any thermostat control. The on/off and level control cluster on this endpoint can be used to set a specific duty cycle. It supports groups and scenes. The identify cluster allows for push-button commissioning as a target.
14 (0x0E)	0x0104: Common Profile (HA)	Heating/Cooling Unit (0x0300). This endpoint provides direct steering of valve output #4, bypassing any thermostat control. The on/off and level control cluster on this endpoint can be used to set a specific duty cycle. It supports groups and scenes. The identify cluster allows for push-button commissioning as a target.
15 (0x0F)	0x0104: Common Profile (HA)	Heating/Cooling Unit (0x0300). This endpoint provides direct steering of valve output #5, bypassing any thermostat control. The on/off and level control cluster on this endpoint can be used to set a specific duty cycle. It supports groups and scenes. The identify cluster allows for push-button commissioning as a target.
16 (0x10)	0x0104: Common Profile (HA)	Heating/Cooling Unit (0x0300). This endpoint provides direct steering of valve output #6, bypassing any thermostat control. The on/off and level control cluster on this endpoint can be used to set a specific duty cycle. It supports groups and scenes. The identify cluster allows for push-button commissioning as a target.
17 (0x11)	0x0104: Common Profile (HA)	Heating/Cooling Unit (0x0300). This endpoint provides direct steering of valve output #7, bypassing any thermostat control. The on/off and level control cluster on this endpoint can be used to set a specific duty cycle. It supports groups and scenes. The identify cluster allows for push-button commissioning as a target.
18 (0x12)	0x0104: Common Profile (HA)	Heating/Cooling Unit (0x0300). This endpoint provides direct steering of valve output #8, bypassing any thermostat control. The on/off and level control cluster on this endpoint can be used to set a specific duty cycle. It supports groups and scenes. The identify cluster allows for push-button commissioning as a target.
19 (0x13)	0x0104: Common Profile (HA)	Heating/Cooling Unit (0x0300). This endpoint provides direct steering of valve output #9, bypassing any thermostat control. The on/off and level control cluster on this endpoint can be used to set a specific duty cycle. It supports groups and scenes. The identify cluster allows for push-button commissioning as a target.
20 (0x14)	0x0104: Common Profile (HA)	Heating/Cooling Unit (0x0300). This endpoint provides direct steering of valve output #10, bypassing any thermostat control. The on/off and level control cluster on this endpoint can be used to set a specific duty cycle. It supports groups and scenes. The identify cluster allows for push-button commissioning as a target.
21 (0x15)	0x0104: Common Profile (HA)	Combined Interface (0x0007). This endpoint serves as a target for an outdoor temperature sensor. The outdoor temperature is made available to all thermostat endpoints. The identify cluster allows for push-button commissioning as a target.
232 (0xE8)	0x0104: Common Profile (HA)	Device Management (0x0507)
242 (0xF2)	0xA1E0: Green Power Profile	ZigBee Green Power Combined Proxy and Sink

The ubisys ZigBee manufacturer ID is 0x10F2. This manufacturer code is used to identify OTA upgrade images, for accessing manufacturer-specific ZCL attributes and commands etc.

Installation Code

This heating controller has a pre-configured link key, which is derived from the installation code printed on the housing in text format and as a two-dimensional barcode (QR code). The format specified in [R6], section 5.4.8.1.1 is used with a full 128-bit installation code + 16-bit CRC. The QR code contains additional information as illustrated in the following example:

```
ubisys2/R0/001FEE00000000FF/0F7C1CD805F91649EBA84580AA1CB432F51A/21
```

Here, “ubisys2” is the data format identifier, R0 is the model string (this is just an example, it would be “H10” for this product), followed by the EUI-64, the installation code, and a checksum that covers the entire information (including model, EUI-64 and installation code), all separated by a single dash character (‘/’). The check sum is an unsigned 8-bit integer, which is calculated by performing a byte-wise exclusive-or (XOR, “⊕”) of the ASCII characters of the model string, the binary representation of the EUI-64 (in big endian format), and the binary representation of the install code.

For the example above, this calculation yields:

```
52 ('R') ⊕ 30 ('0') ⊕  
00 ⊕ 1F ⊕ EE ⊕ 00 ⊕ 00 ⊕ 00 ⊕ 00 ⊕ FF ⊕  
0F ⊕ 7C ⊕ 1C ⊕ D8 ⊕ 05 ⊕ F9 ⊕ 16 ⊕ 49 ⊕ EB ⊕ A8 ⊕ 45 ⊕ 80 ⊕ AA ⊕ 1C ⊕ B4 ⊕ 32 ⊕ F5 ⊕ 1A = 21
```

Notice: The data format “ubisys1” is identical to “ubisys2” except for the check sum, which is present, but invalid. If you encounter “ubisys1” labels, then do not verify the trailing check sum field.

7.1. Application Endpoint #0 – ZigBee Device Object

Please refer to the ZigBee Specification [R2] for details on the ZigBee Device Object (ZDO) and the protocol used for over-the-air communication, called the ZigBee Device Profile (ZDP). Notice that the ZDP is fundamentally different from typical application endpoints, which build on the ZigBee foundation framework and the ZigBee Cluster Library (ZCL).

The ubisys ZigBee dimmer D1/D1-R supports the following ZDO services:

Primitive	Description
nwk_addr_req/ nwk_addr_rsp	Network address request/response Translates a 64-bit IEEE address into a 16-bit network short address. Use only when really required, because this message employs a network-wide broadcast (flooding)
ieee_addr_req/ ieee_addr_rsp	IEEE address request/response Translates a 16-bit network short address into a 64-bit IEEE address.
node_desc_req/ node_desc_rsp	Node descriptor request/response Returns information such as the manufacturer ID, power supply, etc.
power_desc_req/ power_desc_rsp ⁴	Power descriptor request/response Returns information such as the power source and mode.
active_ep_req/ active_ep_rsp	Active endpoints request/response Returns a set of available application endpoints on the device.
simple_desc_req/ simple_desc_rsp	Simple descriptor request/response Returns a descriptor for a certain application endpoint with a list of available services (clusters).
match_desc_req/ match_desc_rsp	Match descriptor request/response Searches for a certain cluster or set of clusters and returns the matching endpoints, if any.
device_annce	Device announcement Advertises the presence of a new device in the network.
parent_annce/ parent_annce_rsp ⁵	Parent announcement/response This is part of the ZigBee 2015 end-device child management feature.
system_server_discovery_req/ system_server_discovery_rsp ⁶	System server discovery request/response Provides the ability to discover system servers, in particular the network manager.
bind_req/ bind_rsp	Bind request/response Creates an application binding
unbind_req/ unbind_rsp	Unbind request/response Removes an application binding
mgmt_nwk_disc_req/ mgmt_nwk_disc_rsp ⁷	Management: Network discovery request/response Instructs the device to perform a network discovery and report the results back.
mgmt_lqi_req/ mgmt_lqi_rsp	Management: Neighbor table request/response Returns information about neighboring devices, including the link quality, device type etc.
mgmt_rtg_req/ mgmt_rtg_rsp	Management: Routing table request/response Returns information about routes established on the device.
mgmt_bind_req/ mgmt_bind_rsp	Management: Binding table request/response Returns information about application bindings on the device.
mgmt_leave_req/ mgmt_leave_rsp	Management: Leave request/response Makes the device leave the network or removes one of its end-device children.
mgmt_permit_joining_req/ mgmt_permit_joining_rsp	Management: Permit joining request/response Opens the network for new devices to join.
mgmt_nwk_update_req/ mgmt_nwk_update_notify ⁸	Management: Network update request/response/notification Performs energy scans, instigates a channel change or assigns the network manager.

⁴ Available in ZigBee stack version 1.60 and above. Legacy ZCP requirement – do not use in applications

⁵ Available in ZigBee stack version 1.56 and above.

⁶ Available in ZigBee stack version 1.50 and above.

⁷ Available in ZigBee stack version 1.61 and above.

⁸ Available in ZigBee stack version 1.61 and above.

7.2. Application Endpoint #1 – Thermostat

Use this application endpoint in (I) a two-pipe system to control the heating or cooling unit connected to output #1, or (II) in a four-pipe system to control the heating unit connected to output #1, and the cooling unit connected to output #10.

This is a Finding & Binding target endpoint.

The application endpoint exposes the following clusters:

Cluster	Direction	Description
0x0000	Inbound (Server)	Basic Provides basic information about the device, such as the manufacturer ID, vendor and model name, stack profile, ZCL version, production date, hardware revision etc. Allows a factory reset of attributes, without the device leaving the network.
0x0003	Inbound (Server)	Identify Allows to put the endpoint into identify mode. Useful for identifying/locating devices and required for Finding & Binding.
0x0004	Inbound (Server)	Groups Allows adding this endpoint to one or more groups. Afterwards the endpoint can be addressed using the group address. This is also a prerequisite for scenes. You may also query group membership and delete group associations.
0x0005	Inbound (Server)	Scenes Allows storing one or more scenes per group, where each scene consists of a pre-set on/off state value. You may either store the current values as a scene, or provide scene settings when adding a scene, or delete scenes.
0x0201	Inbound (Server)	Thermostat Provides temperature control.
0x0201	Outbound (Client)	Thermostat Receives reports from other thermostats.
0x0402	Outbound (Client)	Temperature Measurement Receives reports from temperature sensors.
0x0405	Outbound (Client)	Relative Humidity Measurement Receives reports from relative humidity sensors.
0x0406	Outbound (Client)	Occupancy Sensing Receives reports from occupancy sensors.

7.2.1. Basic Cluster (Server)

Please refer to section 7.22.1 for details.

7.2.2. Identify Cluster (Server)

In identify mode, the channel LED will be toggled once every second, the output itself is not affected.

Attributes supported:

Attribute	Type	Description
0x0000	unsigned16	IdentifyTime The remaining time, in seconds, the device will be identifying itself.

0xFFFD	unsigned16	ClusterRevision The version of the cluster specification this implementation adheres to.
--------	------------	--

Cluster commands supported:

Command	Description
0x00	Identify Puts the device into identify mode, or terminates identify mode.
0x01	Query Identify Determines whether the device is currently identifying, and returns the remaining time if so.

7.2.3. Groups Cluster (Server)

Attributes supported:

Attribute	Type	Description
0x0000	bitmap8, read-only	NameSupport Always set to 0: This implementation does not support storing names for groups.
0xFFFD	unsigned16	ClusterRevision The version of the cluster specification this implementation adheres to.

Cluster commands supported:

Command	Description
0x00	Add Group Adds the endpoint to a group.
0x01	View Group Determines whether the device belongs to a group and returns the group name, if supported.
0x02	Get Group Membership Returns the set of groups this endpoint belongs to.
0x03	Remove Group Removes this endpoint from the specified group. Also removes all scenes that refer to this group.
0x04	Remove All Groups Removes this endpoint from all groups. Also removes all scenes that refer to any of the existing groups.
0x05	Add Group if Identifying Adds this endpoint to the group, if the endpoint is identifying.

7.2.4. Scenes Cluster (Server)

Attributes supported:

Attribute	Type	Description
0x0000	unsigned8, read-only	SceneCount Holds the total number of scenes (across all groups) currently stored on the device.
0x0001	unsigned8, read-only	CurrentScene If the SceneValid attribute is true, this attribute, together with the CurrentGroup attribute, indicates the currently active scene.
0x0002	unsigned8, read-only	CurrentGroup If the SceneValid attribute is true, this attribute, together with the CurrentScene attribute, indicates the currently active scene.

0x0003	bool, read-only	SceneValid If true, the scene identified by CurrentGroup and CurrentScene is currently active, i.e. all device attribute values match the values in the scene field set.
0x0004	bitmap8, read-only	NameSupport Always set to 1: This implementation does support storing names for scenes.
0xFFFD	unsigned16	ClusterRevision The version of the cluster specification this implementation adheres to.

Cluster commands supported:

Command	Description
0x00	Add Scene Adds a scene with or without a scene field set
0x01	View Scene Returns the scene field set, name and transition times for a scene.
0x02	Remove Scene Removes a scene from the scene table.
0x03	Remove All Scenes Removes all scenes that belong to a particular group.
0x04	Store Scene Stores the device's current state as a scene or updates a previously stored scene accordingly.
0x05	Recall Scene Reverts the device's current state using the values from the previously stored field set.
0x06	Get Scene Membership Returns the set of scenes (within the scope of the specified group) currently stored on the device.
0x40	Enhanced Add Scene Similar to Add Scene with higher transition time resolution (10ths of a second instead of once second)
0x41	Enhanced View Scene Similar to View Scene with higher transition time resolution (10ths of a second instead of once second)
0x42	Copy Scene Copies a scene in a single operation as an alternative to (Enhanced) View Scene, (Enhanced) Add Scene

7.2.5. Thermostat Cluster (Server)

Notice: This cluster uses the binding table for managing reporting targets.

Attributes supported:

Attribute	Type	Description
0x0000	signed16, read-only, reportable	LocalTemperature Indicates the local room temperature in the heating/cooling zone. This might be measured using remote zigbee temperature or environmental
0x0001	signed16, read-only, reportable	OutdoorTemperature Indicates the local room temperature in the heating/cooling zone. This might be measured using remote zigbee temperature or environmental
0x0002	bool, read-only, reportable	Occupancy Determines whether the next "Off with Effect" command will store the global scene.
0x0003	signed16, read-only	AbsoluteMinimumHeatingSetpoint Indicates the lowest permissible value for the occupied and unoccupied heating setpoints. In anti-freeze mode, this is also the value being used to control the temperature.
0x0004	signed16, read-only	AbsoluteMaximumHeatingSetpoint Indicates the highest permissible value for the occupied and unoccupied heating setpoints.
0x0005	signed16, read-only	AbsoluteMinimumCoolingSetpoint Indicates the lowest permissible value for the occupied and unoccupied cooling setpoints.
0x0006	signed16, read-only	AbsoluteMaximumCoolingSetpoint Indicates the highest permissible value for the occupied and unoccupied cooling setpoints.

0x0007	unsigned8, read-only, reportable	PICoolingDemand Quantifies the amount of cooling required from a cooling device in order to reach the active cooling setpoint, as determined by the PI control loop. This is a steering value in the range 0...100%.
0x0008	unsigned8, read-only, reportable	PIHeatingDemand Quantifies the amount of heating required from a heating device in order to reach the active heating setpoint, as determined by the PI control loop. This is a steering value in the range 0...100%.
0x0011	signed16, reportable	OccupiedCoolingSetpoint Time, in tenths of a second, the device remains on, before it automatically turns off. This value is set by the "On with timed off" command. This is a 'live' down counter.
0x0012	signed16, reportable	OccupiedHeatingSetpoint Time, in tenths of a second, the device ignores "On with timed off" commands. This is a 'live' down counter.
0x0013	signed16, reportable	UnoccupiedCoolingSetpoint Time, in tenths of a second, the device remains on, before it automatically turns off. This value is set by the "On with timed off" command. This is a 'live' down counter.
0x0014	signed16, reportable	UnoccupiedHeatingSetpoint Time, in tenths of a second, the device ignores "On with timed off" commands. This is a 'live' down counter.
0x0019	signed8, read-only	MinimumSetpointDeadband Minimum dead-band, in units of 0.1°C, between related heating and cooling setpoints. The respective setpoints must be separated by at least this value. The dead-band prevents heating and cooling units from working against each other around the desired target temperature. This dead-band can be considered a comfort zone, i.e. the thermostat will not heat or cool the space as long as the local temperature resides within the bounds set forth by the applicable heating and cooling setpoints.
0x0021	enum8, reportable	ControlSequenceOfOperation Time, in tenths of a second, the device remains on, before it automatically turns off. This value is set by the "On with timed off" command. This is a 'live' down counter.
0x0022	enum8, reportable	SystemMode Time, in tenths of a second, the device ignores "On with timed off" commands. This is a 'live' down counter.
0x0023	enum8, reportable	RunningMode The running mode of the thermostat, i.e. the actual mode it is currently in, which can be either off, heating, or cooling.
0xFFFFD	unsigned16	ClusterRevision The version of the cluster specification this implementation adheres to.

Manufacturer-specific attributes supported:

Attribute	Type	Description
0x0000	enum8, persistent, singleton	Season Specifies whether the device is in winter or summer mode. This will affect the steering level pre-sets while the device is in back-up mode, for instance. A value of '0' indicates winter mode and standard back-up values apply, whereas a value of '1' indicates summer mode and alternate back-up values apply. This singleton attribute is shared across all endpoints.
0x0001	unsigned8, persistent, singleton	HeatingDemandEnableThreshold A threshold on the heating demand. When the heating demand of any channel exceeds this threshold, the device will indicate heating demand to a heating source (boiler) using the according output of the H10-XS extension module. This singleton attribute is shared across all endpoints.
0x0002	unsigned8, persistent, singleton	HeatingDemandDisableThreshold A threshold on the heating demand. When the heating demand of all channels drops below this threshold, the device will no longer indicate heating demand to a heating source (boiler) using the according output of the H10-XS extension module. This singleton attribute is shared across all endpoints.

0x0003	unsigned8, persistent, singleton	CoolingDemandEnableThreshold A threshold on the cooling demand. When the cooling demand of any channel exceeds this threshold, the device will indicate cooling demand to a cooling source (e.g. heat pump) using the according output of the H10-XS extension module. This singleton attribute is shared across all endpoints.
0x0004	unsigned8, persistent, singleton	CoolingDemandDisableThreshold A threshold on the cooling demand. When the cooling demand of all channels drops below this threshold, the device will no longer indicate cooling demand to a cooling source (e.g. heat pump) using the according output of the H10-XS extension module. This singleton attribute is shared across all endpoints.
0x0005	signed8, persistent, singleton	ClassBTemperatureOffset A temperature offset applied to “class B” local temperature readings.
0x0006	signed8, persistent, singleton	ReturnFlowTemperatureWeight Allows to specify the weight of the return flow temperature vs. forward flow temperature when estimating the local temperature using flow temperatures.
0x0007	structure, read-only	RawOutdoorTemperature A structure, where the first field is the outdoor temperature and the second is the corresponding time-stamp.
0x0008	structure, read-only	RawLocalTemperatureA A structure, where the first field is the “class A” local temperature and the second is the corresponding time-stamp.
0x0009	structure, read-only	RawLocalTemperatureB A structure, where the first field is the “class B” local temperature and the second is the corresponding time-stamp.
0x000A	structure, read-only	RawForwardFlowTemperature A structure, where the first field is the forward flow temperature and the second is the corresponding time-stamp.
0x000B	structure, read-only	RawReturnFlowTemperature A structure, where the first field is the return flow temperature and the second is the corresponding time-stamp.

Cluster commands supported:

Command	Description
0x	TBD TBD.
0x	TBD TBD.

7.2.6. Thermostat Cluster (Client)

The thermostat client cluster receives attribute reports for setpoints, local temperature, occupancy, system mode etc. from a leader⁹ thermostat in a group of thermostats. This allows the leader to align one or more thermostats in the same space.

7.2.7. Temperature Measurement Cluster (Client)

The temperature measurement client cluster receives attribute reports from temperature sensors and interprets the measured values as local temperature. Notice that this feature can be used in one of several ways: Classic zigbee temperature sensors can be directly bound such that they send their

⁹ An example of a suitable leader is the Legrand in-wall thermostat UI Model No. 0 663 40

reports directly to the thermostat endpoint. Similarly, zigbee green power temperature sensors can be directly paired with the thermostat endpoint and used to the same effect. Finally, a gateway can collate temperature readings from different devices in the same space and provide a single temperature report to the thermostat with an average temperature. Notice this might interface with local temperature reports from a leader thermostat. Make sure you use either approach, otherwise the most recent report will currently take precedence.

7.2.8. Relative Humidity Measurement Cluster (Client)

The relative humidity measurement client cluster receives attribute reports from relative humidity sensors. Reports are currently not evaluated; this feature is intended for future use.

7.2.9. Occupancy Sensing Cluster (Client)

The occupancy sensing client cluster receives attribute reports from occupancy sensors and interprets the measured values as occupancy in the heating/cooling space. This will bring different heating and cooling setpoints into effect. Notice that this feature can be used in one of several ways: Classic zigbee occupancy sensors can be directly bound such that they send their reports directly to the thermostat endpoint. Similarly, zigbee green power occupancy sensors can be directly paired with the thermostat endpoint and used to the same effect. A gateway can collate occupancy reports from different devices in the same space and provide a single occupancy report to the thermostat. Notice this might interface with occupancy reports from a leader thermostat. Make sure you use either approach, otherwise the most recent report will currently take precedence.

7.3. Application Endpoint #2 – Thermostat

Use this application endpoint in (I) a two-pipe system to control the heating or cooling unit connected to output #2, or (II) in a four-pipe system to control the heating unit connected to output #2, and the cooling unit connected to output #9.

Except for the associated output channels, this endpoint is otherwise similar to endpoint #1, as described in section 7.2.

7.4. Application Endpoint #3 – Thermostat

Use this application endpoint in (I) a two-pipe system to control the heating or cooling unit connected to output #3, or (II) in a four-pipe system to control the heating unit connected to output #3, and the cooling unit connected to output #8.

Except for the associated output channels, this endpoint is otherwise similar to endpoint #1, as described in section 7.2.

7.5. Application Endpoint #4 – Thermostat

Use this application endpoint in (I) a two-pipe system to control the heating or cooling unit connected to output #4, or (II) in a four-pipe system to control the heating unit connected to output #4, and the cooling unit connected to output #7.

Except for the associated output channels, this endpoint is otherwise similar to endpoint #1, as described in section 7.2.

7.6. Application Endpoint #5 – Thermostat

Use this application endpoint in (I) a two-pipe system to control the heating or cooling unit connected to output #5, or (II) in a four-pipe system to control the heating unit connected to output #5, and the cooling unit connected to output #6.

Except for the associated output channels, this endpoint is otherwise similar to endpoint #1, as described in section 7.2.

7.7. Application Endpoint #6 – Thermostat

Use this application endpoint in a two-pipe system to control the heating or cooling unit connected to output #6. Notice that if thermostat endpoint #5 is configured for a four-pipe system it will overrule thermostat endpoint #6. This endpoint cannot be configured for a four-pipe system.

Except for the associated output channels, this endpoint is otherwise similar to endpoint #1, as described in section 7.2.

7.8. Application Endpoint #7 – Thermostat

Use this application endpoint in a two-pipe system to control the heating or cooling unit connected to output #7. Notice that if thermostat endpoint #4 is configured for a four-pipe system it will overrule thermostat endpoint #7. This endpoint cannot be configured for a four-pipe system.

Except for the associated output channels, this endpoint is otherwise similar to endpoint #1, as described in section 7.2.

7.9. Application Endpoint #8 – Thermostat

Use this application endpoint in a two-pipe system to control the heating or cooling unit connected to output #8. Notice that if thermostat endpoint #3 is configured for a four-pipe system it will overrule thermostat endpoint #8. This endpoint cannot be configured for a four-pipe system.

Except for the associated output channels, this endpoint is otherwise similar to endpoint #1, as described in section 7.2.

7.10. Application Endpoint #9 – Thermostat

Use this application endpoint in a two-pipe system to control the heating or cooling unit connected to output #9. Notice that if thermostat endpoint #2 is configured for a four-pipe system it will overrule thermostat endpoint #9. This endpoint cannot be configured for a four-pipe system.

Except for the associated output channels, this endpoint is otherwise similar to endpoint #1, as described in section 7.2.

7.11. Application Endpoint #10 – Thermostat

Use this application endpoint in a two-pipe system to control the heating or cooling unit connected to output #10. Notice that if thermostat endpoint #1 is configured for a four-pipe system it will overrule thermostat endpoint #10. This endpoint cannot be configured for a four-pipe system.

Except for the associated output channels, this endpoint is otherwise similar to endpoint #1, as described in section 7.2.

7.12. Application Endpoint #11 – Heating/Cooling Unit

Controls the heating or cooling unit connected to output #1. In (I) a two-pipe system this is the heating or cooling unit controlled by thermostat #1, or (II) in a four-pipe system this is the heating unit controlled by thermostat #1.

This is a Finding & Binding target endpoint.

The application endpoint exposes the following clusters:

Cluster	Direction	Description
0x0000	Inbound (Server)	Basic Provides basic information about the device, such as the manufacturer ID, vendor and model name, stack profile, ZCL version, production date, hardware revision etc. Allows a factory reset of attributes, without the device leaving the network.
0x0003	Inbound (Server)	Identify Allows to put the endpoint into identify mode. Useful for identifying/locating devices and required for Finding & Binding.
0x0004	Inbound (Server)	Groups Allows adding this endpoint to one or more groups. Afterwards the endpoint can be addressed using the group address. This is also a prerequisite for scenes. You may also query group membership and delete group associations.
0x0005	Inbound (Server)	Scenes Allows storing one or more scenes per group, where each scene consists of a pre-set on/off state value. You may either store the current values as a scene, or provide scene settings when adding a scene, or delete scenes.
0x0006	Inbound (Server)	On/off Allows steering of the associated output, i.e. when used, disables the thermostat and uses the steering values provided by the level control cluster on this endpoint.
0x0006	Inbound (Server)	Level Control Allows steering of the associated output, i.e. when used, disables the thermostat and uses the steering values provided by the level control cluster on this endpoint.
0x0201	Outbound (Client)	Thermostat Receives PI heating demand or PI cooling demand steering reports from a thermostat.

7.12.1. Basic Cluster (Server)

Please refer to section 7.22.1 for details.

7.12.2. Identify Cluster (Server)

In identify mode, the channel LED will be toggled once every second, the output itself is not affected.

Attributes supported:

Attribute	Type	Description
0x0000	unsigned16	IdentifyTime The remaining time, in seconds, the device will be identifying itself.
0xFFFD	unsigned16	ClusterRevision The version of the cluster specification this implementation adheres to.

Cluster commands supported:

Command	Description
0x00	Identify Puts the device into identify mode, or terminates identify mode.
0x01	Query Identify Determines whether the device is currently identifying, and returns the remaining time if so.

7.12.3.Groups Cluster (Server)

Attributes supported:

Attribute	Type	Description
0x0000	bitmap8, read-only	NameSupport Always set to 0: This implementation does not support storing names for groups.
0xFFFD	unsigned16	ClusterRevision The version of the cluster specification this implementation adheres to.

Cluster commands supported:

Command	Description
0x00	Add Group Adds the endpoint to a group.
0x01	View Group Determines whether the device belongs to a group and returns the group name, if supported.
0x02	Get Group Membership Returns the set of groups this endpoint belongs to.
0x03	Remove Group Removes this endpoint from the specified group. Also removes all scenes that refer to this group.
0x04	Remove All Groups Removes this endpoint from all groups. Also removes all scenes that refer to any of the existing groups.
0x05	Add Group if Identifying Adds this endpoint to the group, if the endpoint is identifying.

7.12.4.Scenes Cluster (Server)

Attributes supported:

Attribute	Type	Description
0x0000	unsigned8, read-only	SceneCount Holds the total number of scenes (across all groups) currently stored on the device.
0x0001	unsigned8, read-only	CurrentScene If the SceneValid attribute is true, this attribute, together with the CurrentGroup attribute, indicates the currently active scene.
0x0002	unsigned8, read-only	CurrentGroup If the SceneValid attribute is true, this attribute, together with the CurrentScene attribute, indicates the currently active scene.
0x0003	bool, read-only	SceneValid If true, the scene identified by CurrentGroup and CurrentScene is currently active, i.e. all device attribute values match the values in the scene field set.

0x0004	bitmap8, read-only	NameSupport Always set to 1 : This implementation does support storing names for scenes.
0xFFFD	unsigned16	ClusterRevision The version of the cluster specification this implementation adheres to.

Cluster commands supported:

Command	Description
0x00	Add Scene Adds a scene with or without a scene field set
0x01	View Scene Returns the scene field set, name and transition times for a scene.
0x02	Remove Scene Removes a scene from the scene table.
0x03	Remove All Scenes Removes all scenes that belong to a particular group.
0x04	Store Scene Stores the device's current state as a scene or updates a previously stored scene accordingly.
0x05	Recall Scene Reverts the device's current state using the values from the previously stored field set.
0x06	Get Scene Membership Returns the set of scenes (within the scope of the specified group) currently stored on the device.
0x40	Enhanced Add Scene Similar to Add Scene with higher transition time resolution (10ths of a second instead of once second)
0x41	Enhanced View Scene Similar to View Scene with higher transition time resolution (10ths of a second instead of once second)
0x42	Copy Scene Copies a scene in a single operation as an alternative to (Enhanced) View Scene, (Enhanced) Add Scene

7.12.5. On/off Cluster (Server)

Notice: This cluster uses the binding table for managing reporting targets.

Attributes supported:

Attribute	Type	Description
0x0000	bool, read-only, reportable	OnOff Indicates the state of the valve output, either on = 'true' or off = 'false'. Notice this works in conjunction with the level control cluster on this endpoint.

Cluster commands supported:

Command	Description
0x00	Turn off Turns the output off. The attached load will be disconnected from the mains.
0x01	Turn on Turns the output on. The attached load will be connected to the mains.
0x02	Toggle Turns the output off, if it was turned on or turns the output on, if it was turned off.

7.12.6. Level Control Cluster (Server)

Notice: This cluster uses the binding table for managing reporting targets.

The level control cluster allows adjusting the PWM output duty-cycle between 0% and 100% of the cycle time, taking into account valve polarity. For instance, if the cycle time is one minute and the output steering level is set to 20%, and a valve that is normally closed is attached, the output will be powered for 12 seconds, then turned off for 48 seconds, and so on. In the same example, if the valve is normally open, the output will be powered for 48 seconds, then turned off for 12 seconds.

The application endpoint maintains a set of steering levels and applies the level with the highest priority, which is valid, i.e. in the range 0...254:

- Emergency Steering Value
- Level Steering Value
- Thermostat 2 Steering Value
- Thermostat 1 Steering Value
- External Pass-Through Steering Value
- Backup Steering Value (standard during winter season, or alternate during summer season)

Attributes supported:

Attribute	Type	Description
0x0000	unsigned8, read-only, reportable	CurrentLevel Indicates the current level of the dimmer output, where 0 = 'off', 254 = '100%'.
0x0001	unsigned16, read-only	RemainingTime Specifies the amount of time, in units of 0.1 seconds, required to reach the specified target level
0x000F	bitmap8, persistent	Options¹⁰ Specifies the default command options for commands that support options; these are applied either when the option value and mask are not included in the command payload, or the mask indicates that certain default option bits apply. Factory default setting for 'execute if off' = '1'.
0x0010	unsigned16, persistent	OnOffTransitionTime Specifies the amount of time, in units of 0.1 seconds, which will be used during a transition to either the on or off state, when an on/off/toggle command of the on/off cluster is used to turn the light on or off
0x0011	unsigned8, persistent	OnLevel Specifies the level that shall be applied, when an on/toggle command causes the light to turn on. When this attribute is set to the invalid value (0xFF), the light will return to the previously active level (before it was turned off), when it is turned on again
0x4000	unsigned8, persistent	StartupLevel¹¹ Specifies the initial level to be applied after reboot. When this attribute is set to the invalid value (0xFF), the light will return to the previously active level (before power was cut), when it is turned on again. Otherwise the current level will be set to the value specified here subject to range limitations imposed by the ballast configuration cluster on this endpoint
0xFFFFD	unsigned16	ClusterRevision The version of the cluster specification this implementation adheres to.

Manufacturer-specific attributes supported:

¹⁰ Since application version 1.07. Prior, the hard-coded default for the "execute if off" option was always '1'.

¹¹ Since application version 1.07. Prior, the device would always have the output turned off after reboot.

Attribute	Type	Description
0x0000	bitmap8, persistent	ValveType The least significant bit of this attribute specifies the valve position when no power is supplied to the valve. The attached valve may be normally closed (bit #0 = '0') or normally open (bit #0 = '1').
0x0001	unsigned8, persistent	CyclePeriod Determines the duration of a single PWM cycle, in integer multiples of 15 seconds, minus one. For instance, a value of 0 equals 15 seconds, whereas a value of 119 indicates 30 minutes
0x0002	unsigned8, persistent	BackupLevel An output steering level which is applied to the valve output during winter time in case none of the other steering values is valid.
0x0003	unsigned8, persistent, singleton	AlternateBackupLevel An output steering level which is applied to the valve output during summer time in case none of the other steering values is valid.
0x0004	unsigned8, persistent	LowerRange A lower bound on the steering level. Output steering values below LowerRange will be clamped to LowerRange.
0x0005	unsigned8, persistent	UpperRange An upper bound on the steering level. Output steering values above UpperRange will be clamped to UpperRange.
0x0006	unsigned8, persistent, singleton	PumpThresholdOn A threshold, applicable to steering levels across all outputs, above which the appropriate circulation pump for either the heating or cooling pipe will be turned on. In other words, if any steering level exceeds the threshold, the pump will be turned on. The resulting control output is available on the H10-XP extension module.
0x0007	unsigned8, persistent, singleton	PumpThresholdOff A threshold, applicable to steering levels across all outputs, below which the appropriate circulation pump for either the heating or cooling pipe will be turned off. In other words, if all steering levels drop below the threshold, the pump will be turned off. The resulting control output is available on the H10-XP extension module.

Cluster commands supported:

Command	Description
0x00	Move To Level Moves the current level to a certain target level within a specified transition time. Supports command options. ¹⁰
0x01	Move Moves the level either up or down at a specified rate. Supports command options. ¹⁰
0x02	Step Increments or decrements the level by a certain amount within a specified transition time. Supports command options. ¹⁰
0x03	Stop Stops any level change in progress due to a move, move to level, step or recall scene command.
0x04	Move To Level with on/off Moves the current level to a certain target level within a specified transition time. Maintains the companion on/off cluster's OnOff attribute.
0x05	Move with on/off Moves the level either up or down at a specified rate. Maintains the companion on/off cluster's OnOff attribute.
0x06	Step with on/off Increments or decrements the level by a certain amount within a specified transition time. Maintains the companion on/off cluster's OnOff attribute.
0x07	Stop Stops any level change in progress due to a move, move to level, step or recall scene command.

7.13. Application Endpoint #12 – Heating/Cooling Unit

Controls the heating or cooling unit connected to output #2. In (I) a two-pipe system this is the heating or cooling unit controlled by thermostat #2, or (II) in a four-pipe system this is the heating unit controlled by thermostat #2.

Except for the associated output channels, this endpoint is otherwise similar to endpoint #11, as described in section 7.12.

7.14. Application Endpoint #13 – Heating/Cooling Unit

Controls the heating or cooling unit connected to output #3. In (I) a two-pipe system this is the heating or cooling unit controlled by thermostat #3, or (II) in a four-pipe system this is the heating unit controlled by thermostat #3.

Except for the associated output channels, this endpoint is otherwise similar to endpoint #11, as described in section 7.12.

7.15. Application Endpoint #14 – Heating/Cooling Unit

Controls the heating or cooling unit connected to output #4. In (I) a two-pipe system this is the heating or cooling unit controlled by thermostat #4, or (II) in a four-pipe system this is the heating unit controlled by thermostat #4.

Except for the associated output channels, this endpoint is otherwise similar to endpoint #11, as described in section 7.12.

7.16. Application Endpoint #15 – Heating/Cooling Unit

Controls the heating or cooling unit connected to output #5. In (I) a two-pipe system this is the heating or cooling unit controlled by thermostat #5, or (II) in a four-pipe system this is the heating unit controlled by thermostat #5.

Except for the associated output channels, this endpoint is otherwise similar to endpoint #11, as described in section 7.12.

7.17. Application Endpoint #16 – Heating/Cooling Unit

Controls the heating or cooling unit connected to output #6. In (I) a two-pipe system this is the heating or cooling unit controlled by thermostat #6, or (II) in a four-pipe system this is the cooling unit controlled by thermostat #5.

Except for the associated output channels, this endpoint is otherwise similar to endpoint #11, as described in section 7.12.

7.18. Application Endpoint #17 – Heating/Cooling Unit

Controls the heating or cooling unit connected to output #7. In (I) a two-pipe system this is the heating or cooling unit controlled by thermostat #7, or (II) in a four-pipe system this is the cooling unit controlled by thermostat #4.

Except for the associated output channels, this endpoint is otherwise similar to endpoint #11, as described in section 7.12.

7.19. Application Endpoint #18 – Heating/Cooling Unit

Controls the heating or cooling unit connected to output #8. In (I) a two-pipe system this is the heating or cooling unit controlled by thermostat #8, or (II) in a four-pipe system this is the cooling unit controlled by thermostat #3.

Except for the associated output channels, this endpoint is otherwise similar to endpoint #11, as described in section 7.12.

7.20. Application Endpoint #19 – Heating/Cooling Unit

Controls the heating or cooling unit connected to output #9. In (I) a two-pipe system this is the heating or cooling unit controlled by thermostat #9, or (II) in a four-pipe system this is the cooling unit controlled by thermostat #2.

Except for the associated output channels, this endpoint is otherwise similar to endpoint #11, as described in section 7.12.

7.21. Application Endpoint #20 – Heating/Cooling Unit

Controls the heating or cooling unit connected to output #10. In (I) a two-pipe system this is the heating or cooling unit controlled by thermostat #10, or (II) in a four-pipe system this is the cooling unit controlled by thermostat #1.

Except for the associated output channels, this endpoint is otherwise similar to endpoint #11, as described in section 7.12.

7.22. Application Endpoint #232 – Device Management

This endpoint provides device management functions using standard ZigBee foundation paradigms and the ZigBee Cluster Library [R4]. You may use the standard ZCL frames to enumerate, read and write attributes, configure attribute reporting, invoke commands, etc.

The application endpoint exposes the following clusters:

Cluster	Direction	Description
0x0000	Inbound (Server)	Basic Provides basic information about the device, such as the manufacturer ID, vendor and model name, stack profile, ZCL version, production date, hardware revision etc. Allows a factory reset of attributes, without the device leaving the network.
0x0003	Outbound (Client) ¹²	Identify Allows to identify targets during Finding & Binding push-button commissioning.
0x0015	Inbound (Server)	Commissioning Offers fine-grained commissioning options, for example, configuring a certain short address, channel mask, concentrator setup etc. This cluster is rarely used.
0x0019	Outbound (Client)	OTA Upgrade Pull-oriented firmware upgrade. Searches the network for mating servers and allows the server to control all stages of the upgrade process, including which image to download, when to download, at what rate and when to install the downloaded image.

7.22.1. Basic Cluster (Server)

The basic cluster might be accessible via more than one endpoint. Most of its attributes are singleton attributes, i.e. all instances of the cluster share the same attribute value storage.

Attributes supported:

Attribute	Type	Description
0x0000	unsigned8, read-only	ZCLVersion The version of the cluster library
0x0001	unsigned8, read-only	ApplicationVersion The application version
0x0002	unsigned8, read-only	StackVersion The stack version
0x0003	unsigned8, read-only	HWVersion Specifies the hardware revision number
0x0004	string, read-only	ManufacturerName "ubisys"
0x0005	string, read-only	ModelIdentifier "H10"
0x0006	string, read-only	DateCode "YYYYMMDD-XX-FBV", where YYYY = year, MM = month, DD = day of production (hardware), XX = production facility, V = factory block version. For example, "20130411-DE-FB0" refers to a device built April 11, 2013 in Germany and programmed with factory block format version 0.
0x0007	enum8, read-only	PowerSource Always set to mains-powered, single phase (regardless of the connected supply voltage)
0x0010	string, persistent	LocationDescription Empty string by default. Might be set by commissioning software during installation
0x0011	unsigned8,	PhysicalEnvironment

¹² Since application version 1.04. Prior, the server side of identify was available.

	persistent	“Unspecified” by default. Might be set by commissioning software during installation
0xFFFD	unsigned16	ClusterRevision The version of the cluster specification this implementation adheres to.

Cluster commands supported:

None.

7.22.2. Identify Cluster (Client)

The client side of the identify cluster on this endpoint is used for push-button commissioning.

Cluster commands transmitted:

Command	Description
0x01	Query Identify This command is broadcast during push-button commissioning to identify suitable binding targets. Once target devices are selected, they will be queried for matching descriptors.

7.22.3. Commissioning Cluster (Server)

This implementation supports all attributes and most commands. However, the cluster has limited value. It is rarely used and might be removed in the future.

7.22.4. Over-the-Air Upgrade Cluster (Client)

The image type for H10 is 0x7B0B. You may request the latest firmware in ZigBee OTA image format to upgrade devices in the field using your own OTA server and back-end. If you operate the H10 together with the ZigBee/Ethernet Gateway ubisys G1, the latest firmware for H10 will always be available automatically and you do not need to request it explicitly.

7.23. Application Endpoint #242 – ZigBee Green Power

This endpoint provides the ZigBee Green Power feature according to the 2015 edition of the specification, i.e. including support for Green Power Devices with IEEE EUI-64 and bidirectional commissioning. The ZigBee traffic between Proxies and Sinks utilizes standard ZigBee foundation paradigms and the ZigBee Cluster Library [R4]. You may use the standard ZCL frames to enumerate, read and write attributes, invoke commands, etc.

The application endpoint exposes the following clusters:

Cluster	Direction	Description
0x0021	Inbound (Server)	ZigBee Green Power Sink Allows pairing the dimmer with ZigBee Green Power switches. The sink can directly receive Green Power frames but can also utilize proxies in the network.
0x0021	Outbound (Client)	ZigBee Green Power Proxy Allows sinks on the network to configure this device as a “Proxy”, i.e. access point for ZigBee Green Power Devices into the ZigBee mesh network.

7.23.1. Green Power Cluster (Server)

The server-side of the Green Power cluster provides the ZigBee Green Power Sink functionality, i.e. provides the ability to process Green Power frames. The device can receive those frames directly if they are in radio range; or it can process frames tunneled over the ZigBee network via other Green Power Proxies. This implementation supports unidirectional and bidirectional¹³ GPDs.

Attributes supported:

Attribute	Type	Description
0x0000	unsigned8, read-only	gpsMaxSinkTableEntries The number of sink table entries supported by this device
0x0001	extended raw binary, read-only, persistent	SinkTable Entries in the sink table create a pairing between the sink and a Green Power Device. For an operational pairing, one or more entries in the translation table are also required
0x0002	bitmap8	gpsCommunicationMode Determines the default communication mode between sink and proxies for new entries added by the sink to the sink table when paired with a GPD
0x0003	bitmap8	gpsCommissioningExitMode Specifies under which circumstances the sink should leave commissioning mode
0x0004	unsigned16	gpsCommissioningWindow Time, in seconds, before a commissioning session expires
0x0005	bitmap8, persistent	gpsSecurityLevel Determines the minimum security level a GPD is required to support as well as whether or not the Trust Center needs to be involved into the commissioning process
0x0006	bitmap24, read-only	gpsFunctionality Indicates Green Power features and building blocks supported by this device
0x0007	bitmap24, read-only	gpsActiveFunctionality Allows to disable certain Green Power features on this device
0x0020	bitmap8, persistent	gpSharedSecurityKeyType Determines the security key type to use for devices with bidirectional commissioning capabilities, i.e. out-of-the-box individual key, shared GP key, etc.

¹³ Bidirectional communication is currently limited to the commissioning stage

0x0021	key128, persistent	gpSharedSecurityKey The 128-bit AES-CCM* key that is being used to secure Green Power data frames
0x0022	key128, persistent	gpLinkKey The 128-bit AES-CCM* key that is being used to deliver keying material to Green Power devices
0xFFFD	unsigned16	ClusterRevision The version of the cluster specification this implementation adheres to.

Cluster commands supported:

Command	Description
0x00	GP Notification Tunnels GP frames from a Green Power Device to one or more sinks or groups of sinks
0x04	GP Commissioning Notification Tunnels GP frames from a Green Power Device to a sink in commissioning mode
0x05	GP Sink Commissioning Mode Makes the sink enter or leave commissioning mode for a particular endpoint or all endpoints
0x09	GP Pairing Configuration Creates, updates or removes pairings by modifying the sink and translation table entries accordingly
0x0A	GP Sink Table Request Allows to query the sink table for a certain Green Power Device or read out the table in chunks

Cluster commands transmitted:

Command	Description
0x01	GP Pairing Creates, updates or removes proxy table entries
0x02	GP Proxy Commissioning Mode Makes the proxy enter commissioning mode for a particular sink, or leave commissioning mode
0x06	GP Response Tunnels GP data frames from a sink to a bidirectional Green Power Device
0x0A	GP Sink Table Response Conveys a set of sink table entries to a management application

7.23.1.1. Green Power Device Interaction

Commissioning a Green Power Sensor

The H10 can be put in commissioning mode either by using a suitable commissioning tool (for example the ubisys Network Manager) or by instigating Finding & Binding as a target. Once in commissioning mode, the device is ready to pair with Green Power sensors. Notice that endpoints #1 to #10 are commissioned individually, i.e. they can receive data from separate sensors.

Supported Device Types

The H10 can be paired with the following pre-defined Green Power Device types:

Device Type	Description
0x12	Occupancy Sensor Attribute reports for occupancy sensing cluster
0x30	Temperature Sensor Attribute reports for temperature measurement cluster
0x33	Indoor Environmental Sensor Attribute reports for temperature measurement and relative humidity measurement cluster

In addition, any Green Power device that sends at least one of the supported commands listed in the next section conveying attribute reports for either temperature measurement, relative humidity measurement, or occupancy sensing, is acceptable.

Supported Green Power Commands

The following Green Power commands are supported by default translations:

Command	Description
0xA0 ¹⁴	Attribute Report
0xA1 ¹⁴	Attribute Report, manufacturer-specific
0xA2 ¹⁴	Attribute Report, multiple clusters
0xA3 ¹⁴	Attribute Report, multiple clusters, manufacturer-specific
0xA6	Generic Tunnel
0xA8	Attribute Report, compact

7.23.2. Green Power Cluster (Client)

The client-side of the Green Power cluster provides the ZigBee Green Power Proxy functionality, i.e. makes the device act as an “access point” for Green Power Devices (GPDs). This implementation supports unidirectional and bidirectional¹⁵ GPDs.

Attributes supported:

Attribute	Type	Description
0x0010	unsigned8, read-only	gppMaxProxyTableEntries The number of proxy table entries supported by this device
0x0011	extended raw binary, read-only, persistent	ProxyTable Entries in the proxy table create a link between Green Power Devices and Green Power Sinks
0x0016	bitmap24, read-only	gppFunctionality Indicates Green Power features and building blocks supported by this device
0x0017	bitmap24, read-only	gppActiveFunctionality Allows to disable certain Green Power features on this device
0x0020	bitmap8, persistent	gpSharedSecurityKeyType Determines the security key type to use for devices with bidirectional commissioning capabilities, i.e. out-of-the-box individual key, shared GP key, etc.
0x0021	key128, persistent	gpSharedSecurityKey The 128-bit AES-CCM* key that is being used to secure Green Power data frames
0x0022	key128, persistent	gpLinkKey The 128-bit AES-CCM* key that is being used to deliver keying material to Green Power devices
0xFFFD	unsigned16	ClusterRevision The version of the cluster specification this implementation adheres to.

Cluster commands supported:

¹⁴ Notice that a single translation table entry, 0xAF, is used to cover 0xA0, 0xA1, 0xA2 and 0xA3 commands

¹⁵ Bidirectional communication is currently limited to the commissioning stage

Command	Description
0x01	GP Pairing Creates, updates or removes proxy table entries
0x02	GP Proxy Commissioning Mode Makes the proxy enter commissioning mode for a particular sink, or leave commissioning mode
0x06	GP Response Tunnels GP data frames from a sink to a bidirectional Green Power Device
0x0B	GP Proxy Table Request Allows to query the proxy table for a certain Green Power Device or read out the table in chunks

Cluster commands transmitted:

Command	Description
0x00	GP Notification Tunnels GP frames from a Green Power Device to one or more sinks or groups of sinks
0x04	GP Commissioning Notification Tunnels GP frames from a Green Power Device to a sink in commissioning mode
0x0B	GP Proxy Table Response Conveys a set of proxy table entries to a sink or management application

8. PHYSICAL DIMENSIONS

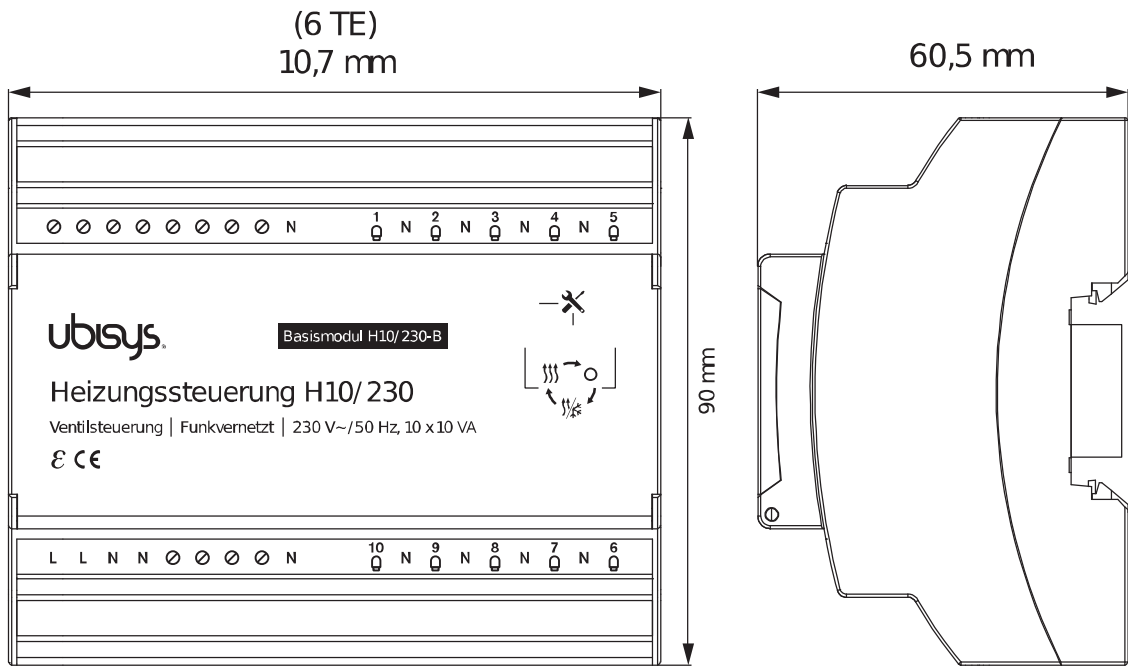


Figure 1: H10/230-B 10-Channel Zigbee Thermostat for 230V~/50Hz Base Module – Dimensions

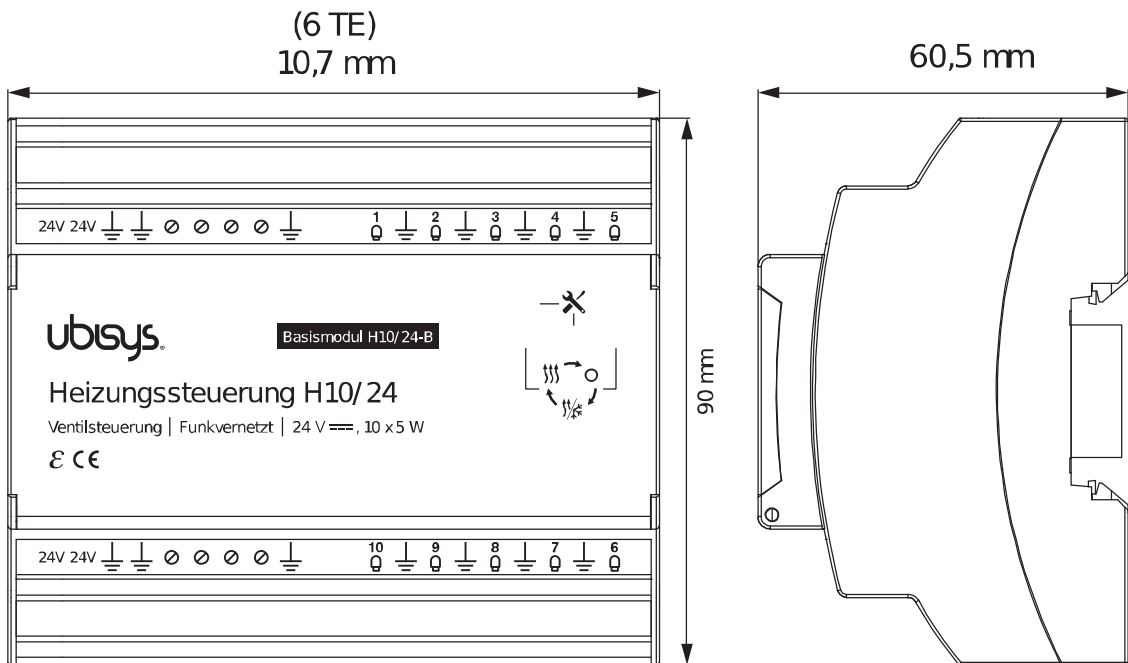


Figure 2: H10/24-B 10-Channel Zigbee Thermostat for 24V= Base Module – Dimensions

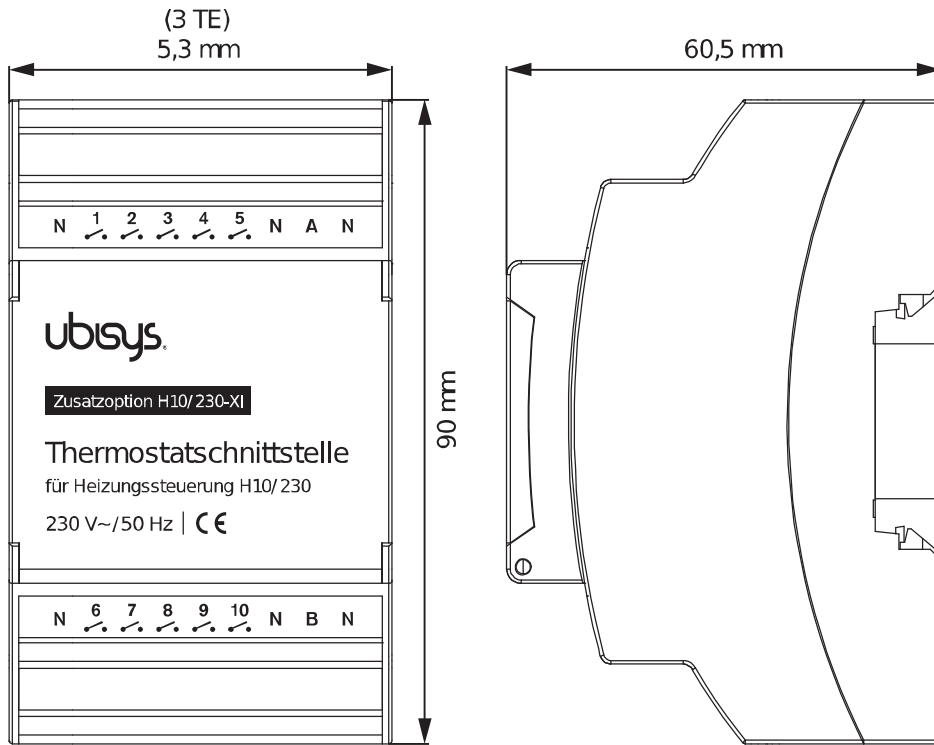


Figure 3: H10/230-XI Wired 230V~/50Hz Thermostat Interface Extension Module – Dimensions

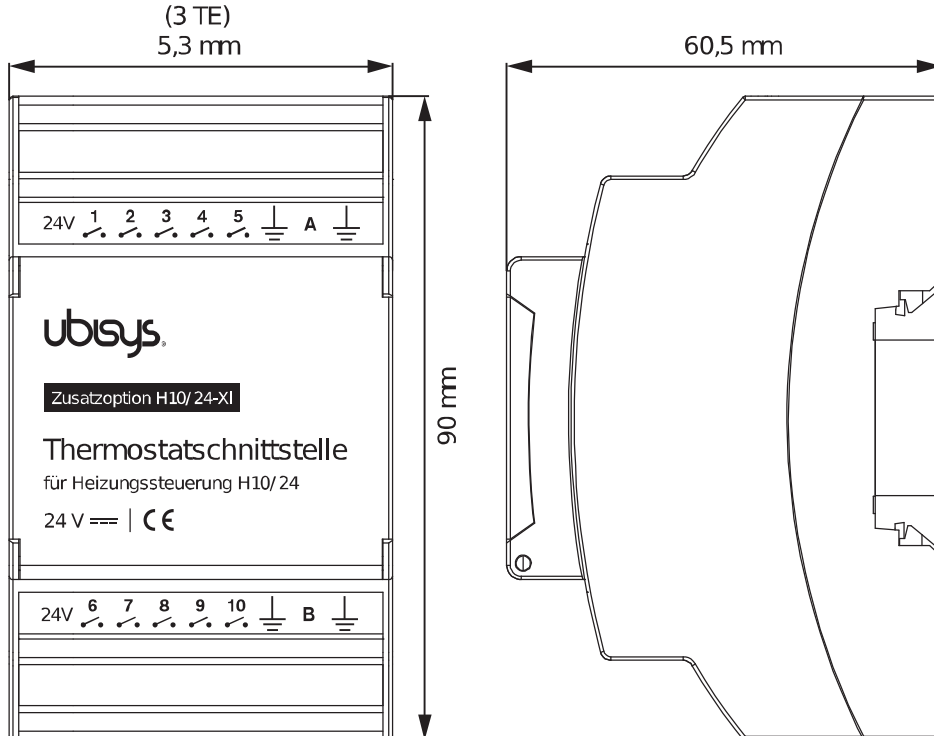


Figure 4: H10/24-XI Wired 24V= Thermostat Interface Extension Module – Dimensions

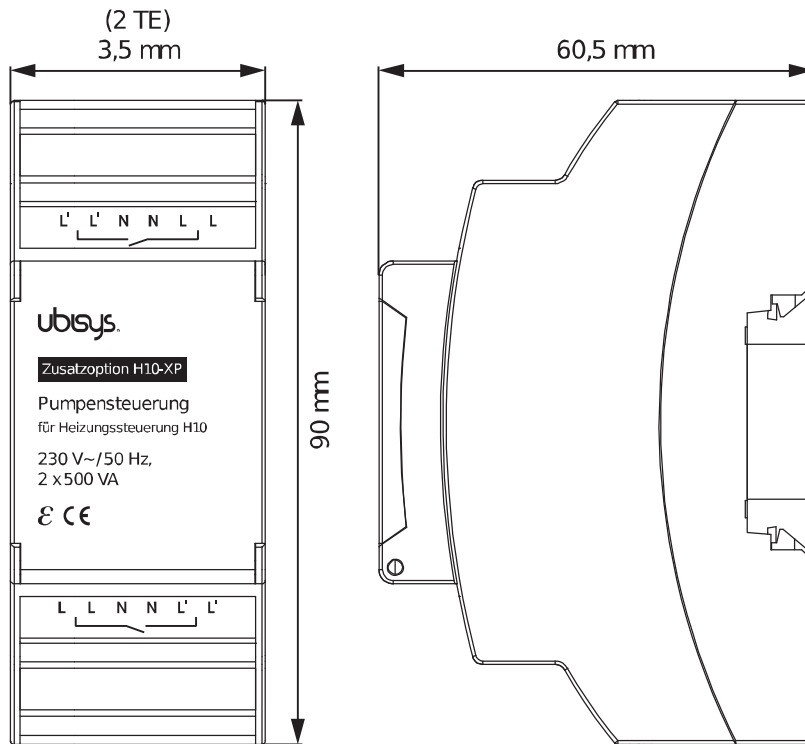


Figure 5: H10-XP Circulation Pump Control Extension Module – Dimensions

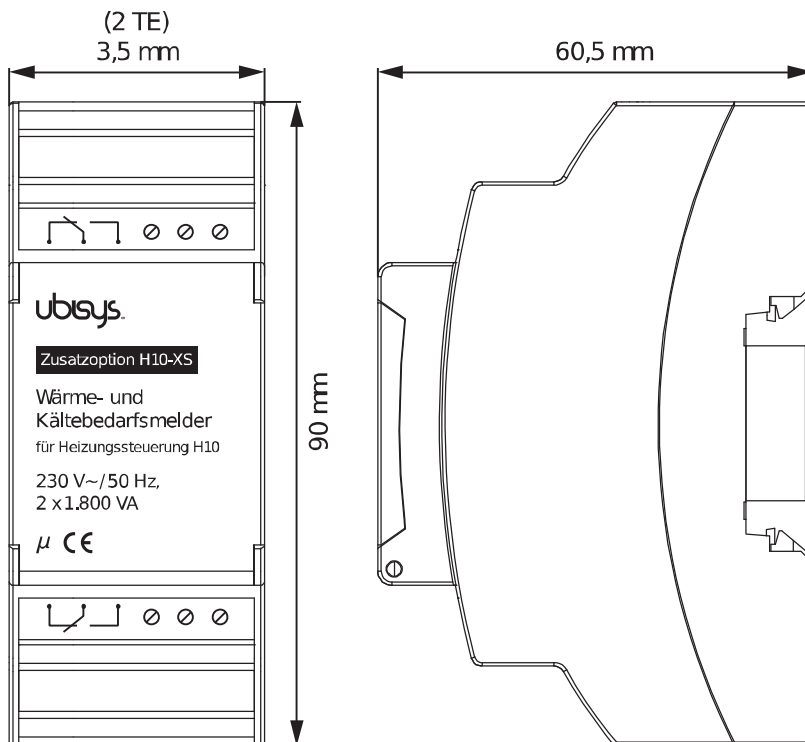


Figure 6: H10-XS Heating/Cooling Demand Extension Module – Dimensions

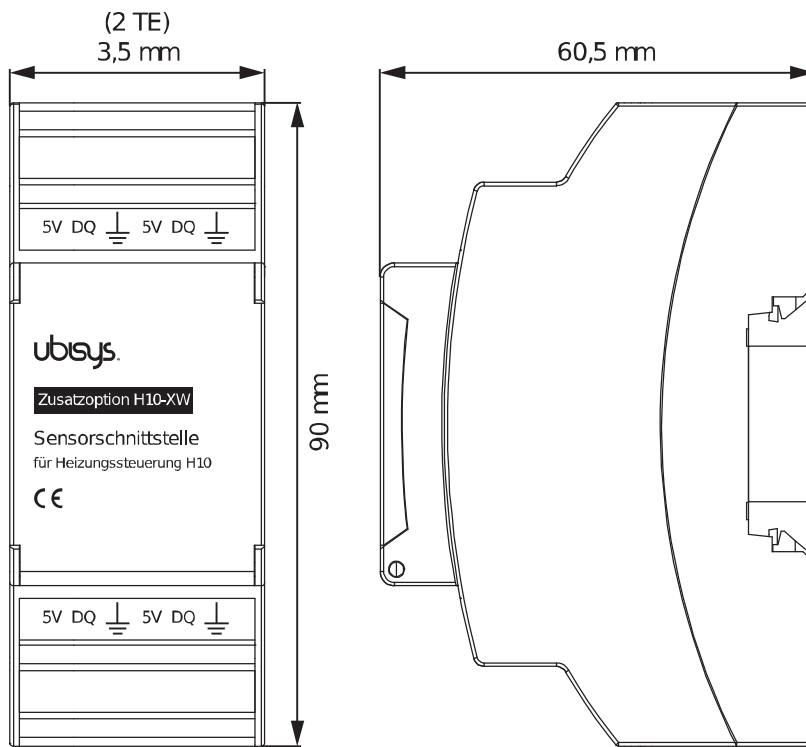


Figure 7: H10-XW 1-Wire® Bridge Extension Module – Dimensions

9. ORDERING INFORMATION

The following tables list the product variants available. Use the specified order code for your orders. Please contact ubisys support if you require any customization.

Order Code	Description
0000	H10/230-B 10-Channel Zigbee Thermostat for 230V~/50Hz Base Module
0000	H10/24-B 10-Channel Zigbee Thermostat for 24V= Base Module
0000	H10-XP Circulation Pump Control Extension Module
0000	H10-XS Heating/Cooling Demand Extension Module
0000	H10-XW 1-Wire® Bridge Extension Module
0000	H10/230-XI Wired 230V~/50Hz Thermostat Interface Extension Module
0000	H10/24-XI Wired 24V= Thermostat Interface Extension Module

The housings are flame retardant (V-0), Color: Black, RAL 9005.

10. GENERAL TERMS & CONDITIONS OF BUSINESS

When placing your order you agree to be bound by our General Terms & Conditions of Business, “Allgemeine Geschäftsbedingungen”, which are available for download here:
<http://www.ubisys.de/en/smarthome/terms.html>

11. DECLARATION OF CONFORMITY



We – ubisys technologies GmbH, Neumannstraße 10, 40235 Düsseldorf, Germany – declare under our sole responsibility that the ubisys Heating Regulator H10 and its associated extension modules with trade names and order codes as detailed in section 0, to which this declaration relates, are in conformity with the following directives and standards:

Directive/Standard	Description/Scope
2014/53/EU	Radio Equipment Directive (RED)
2014/30/EU	Electromagnetic Compatibility Directive (EMC)
2014/35/EU	Low Voltage Directive (LVD)
2012/19/EU	Waste Electrical and Electronic Equipment Directive (WEEE)
2011/65/EU	Restriction of Hazardous Substances Directive (RoHS)
EN 300 328	ERM; Wideband transmission systems; 2.4 GHz ISM band
EN 300 440	ERM; Radio equipment to be used in the 1 GHz to 40 GHz frequency range
EN 301 489	EMC
IEEE 802.15.4	IEEE Standard 802 – Part 15.4: Low-Rate Wireless Personal Area Networks (LR-WPANs)
ZigBee 3.0	ZigBee 2015 with Green Power

Düsseldorf, Germany

Place of issue

Dr.-Ing. Arasch Honarbacht

Full name of Authorized Signatory

Signature

April 11, 2018

Date of issue

Managing Director, Head of Research & Development

Title of Authorized Signatory

ubisys.
UBISYS TECHNOLOGIES GMBH
HARDWARE UND SOFTWARE DESIGN
ENGINEERING UND CONSULTING
AM WEHRHAHN 45
40211 DÜSSELDORF
info@ubisys.de
www.ubisys.de

Seal

12. REVISION HISTORY

Revision	Date	Remarks
1.0	11/05/2018	Initial Public Version

13. CONTACT

UBISYS TECHNOLOGIES GMBH
NEUMANNSTRASSE 10
40235 DÜSSELDORF
GERMANY

T: +49 (211) 54 21 55 - 00

F: +49 (211) 54 21 55 - 99

www.ubisys.de

info@ubisys.de